




Power Seat (Driver's Seat)


From Power Source System (See Page 100)

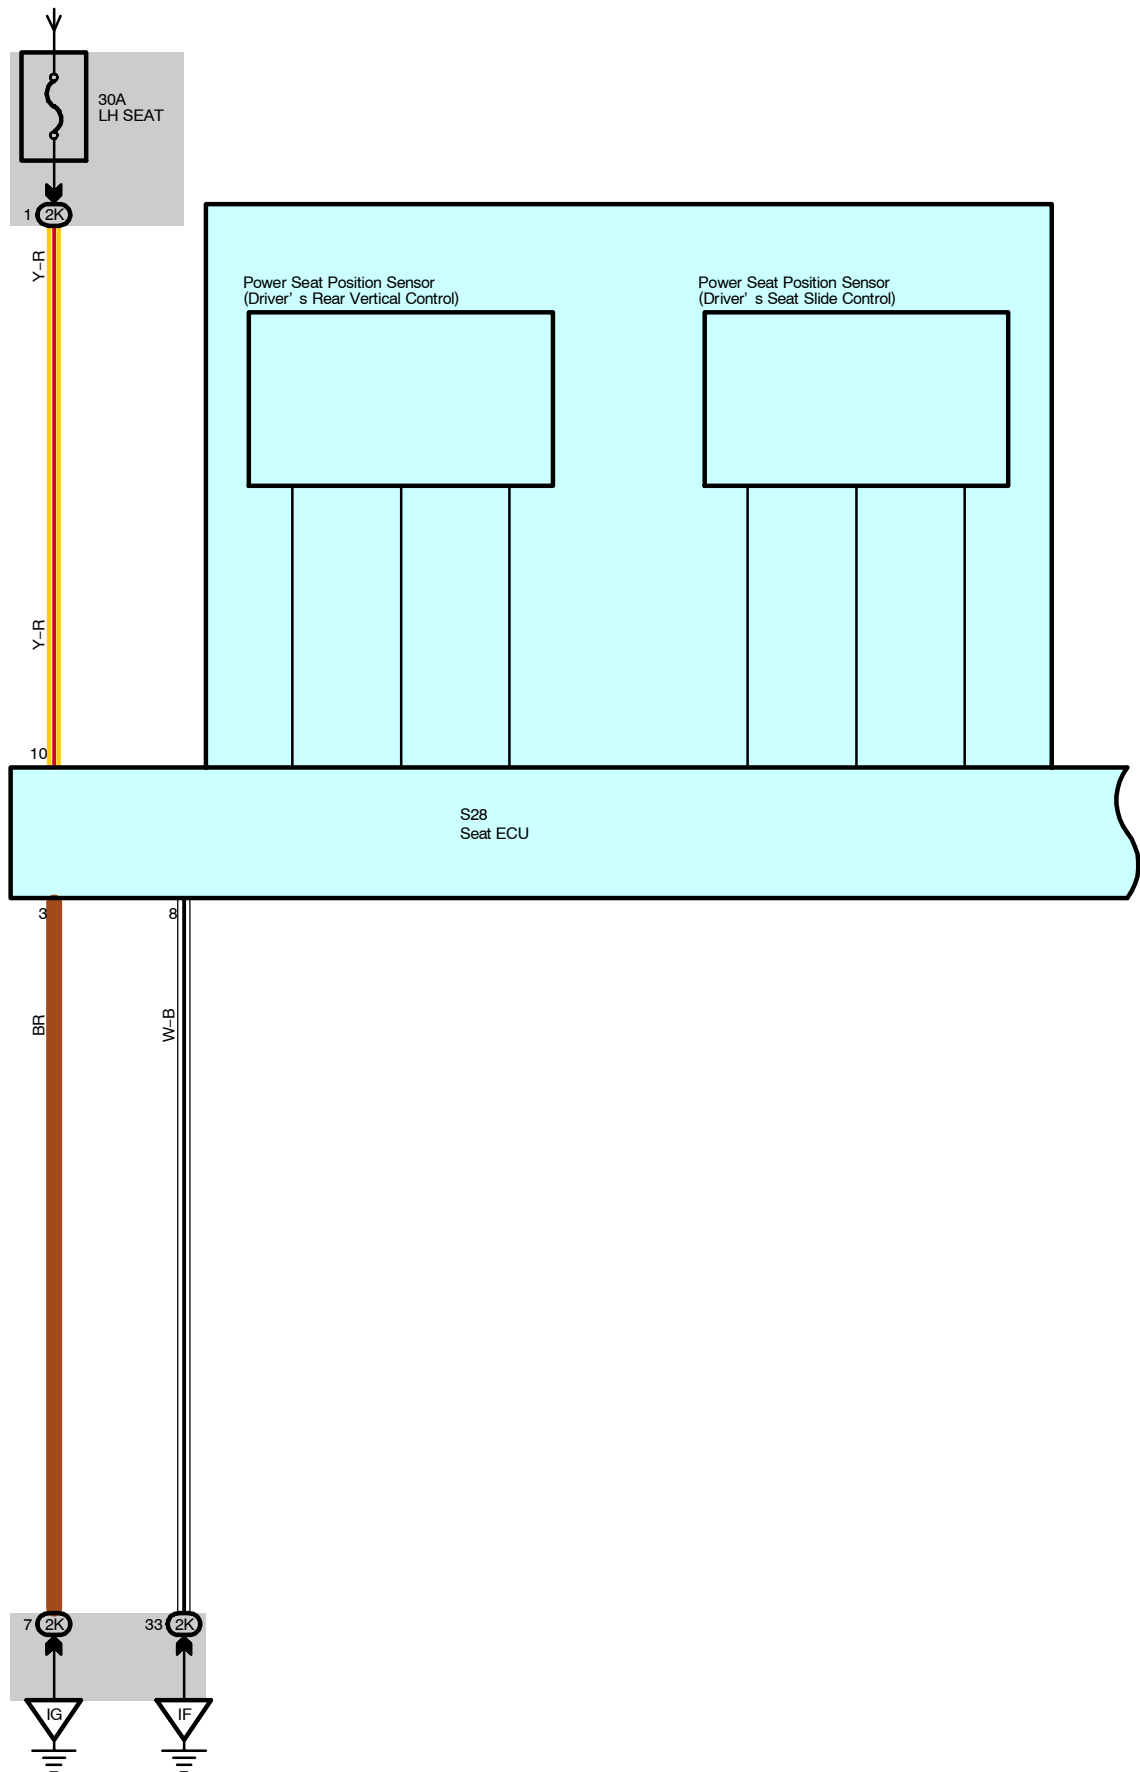

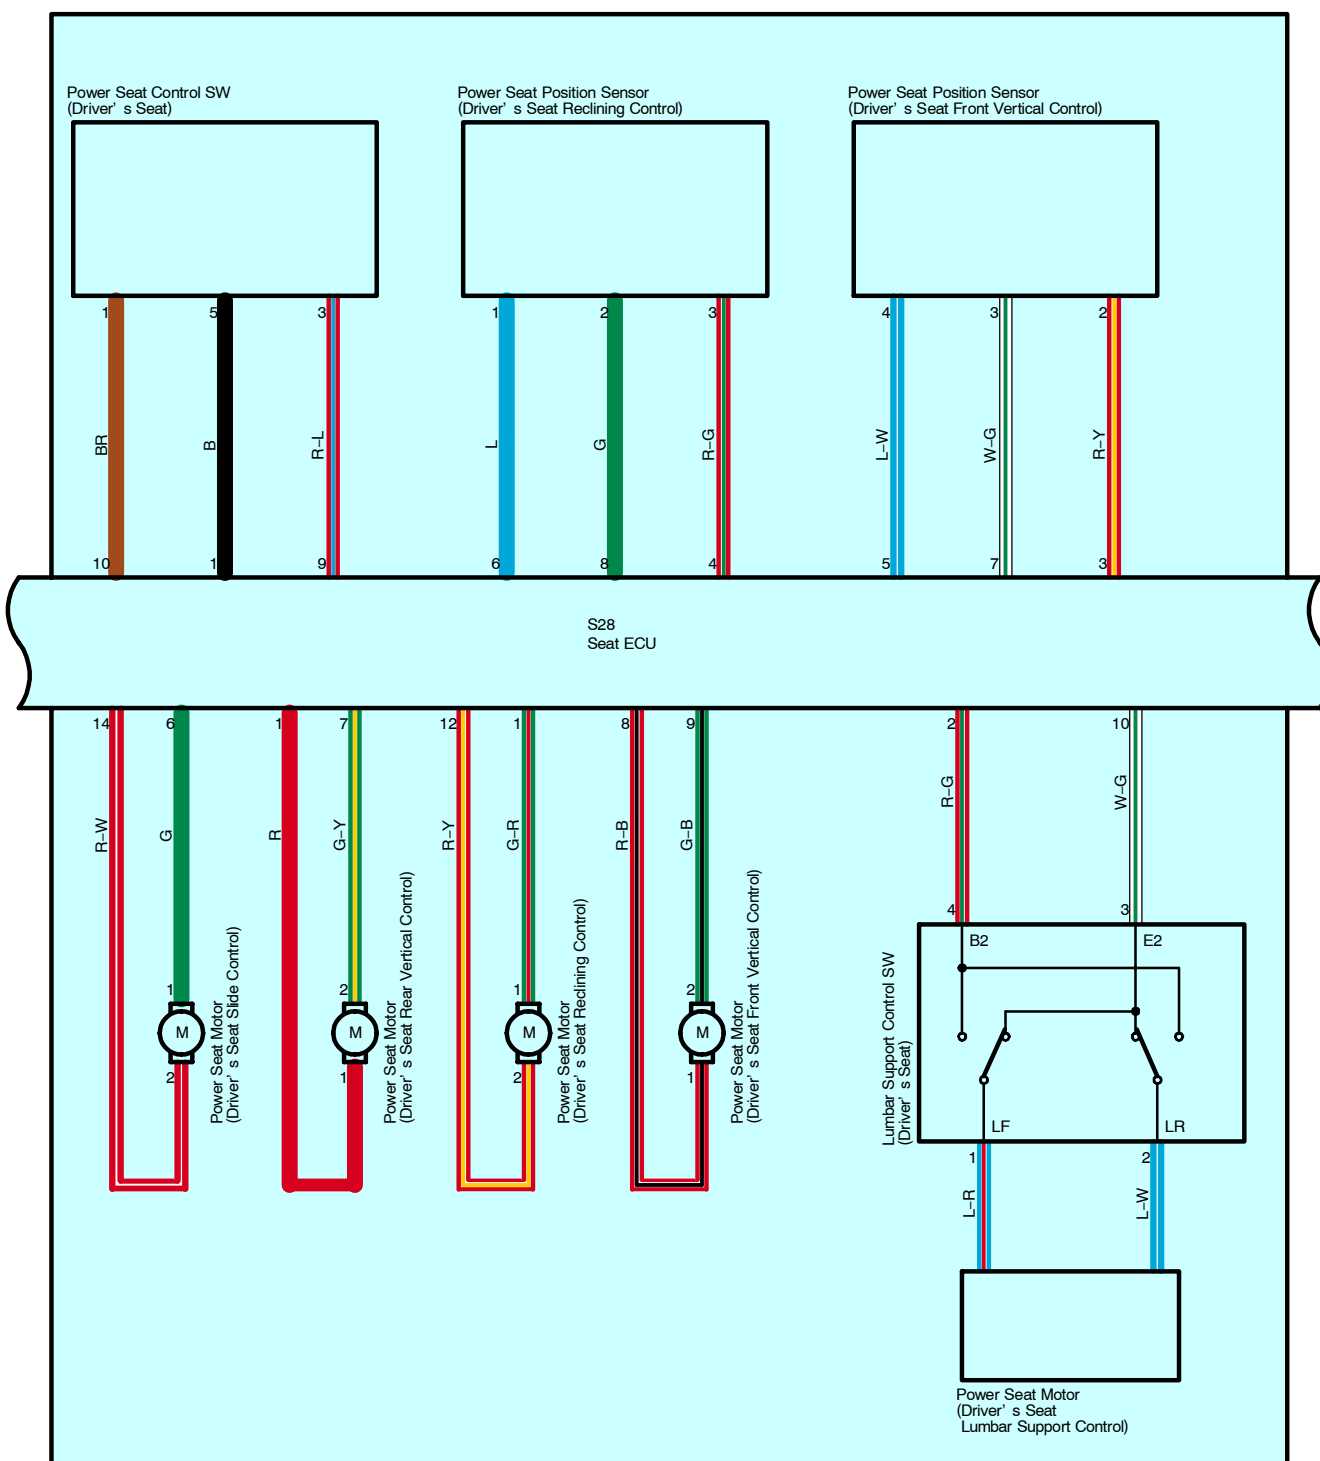

Power Seat (Driver's Seat)

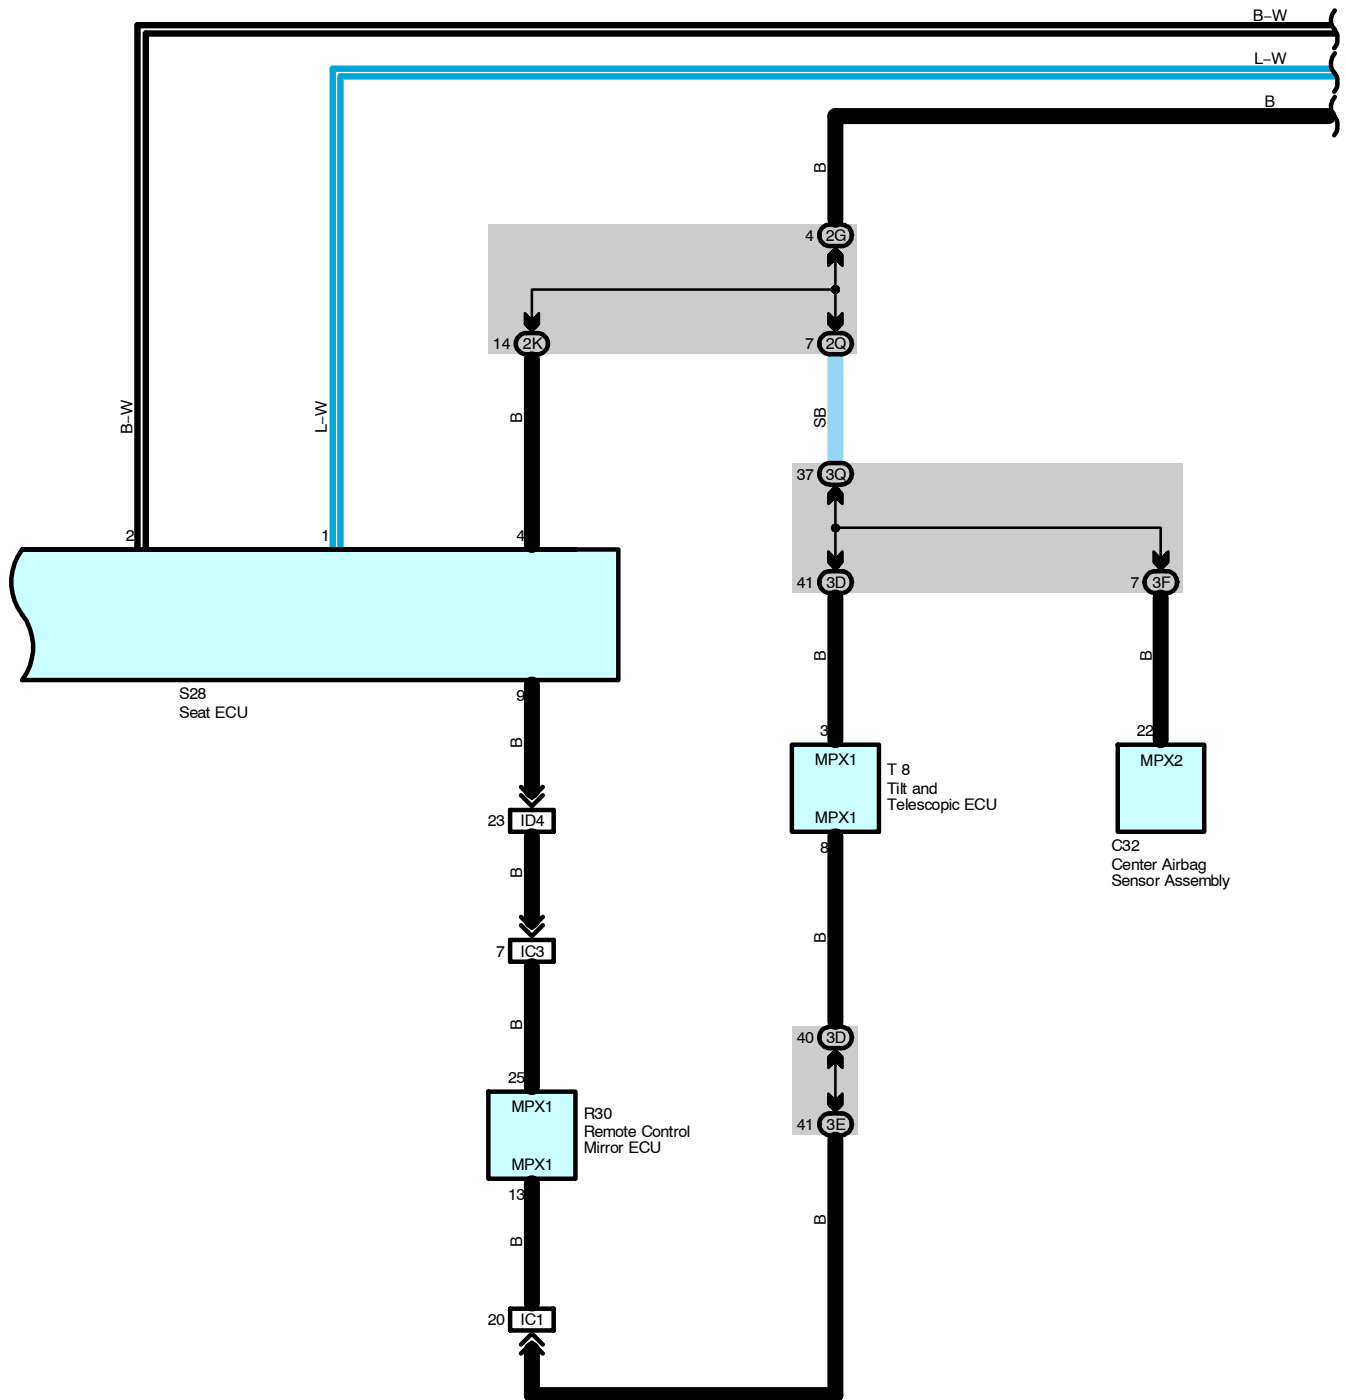

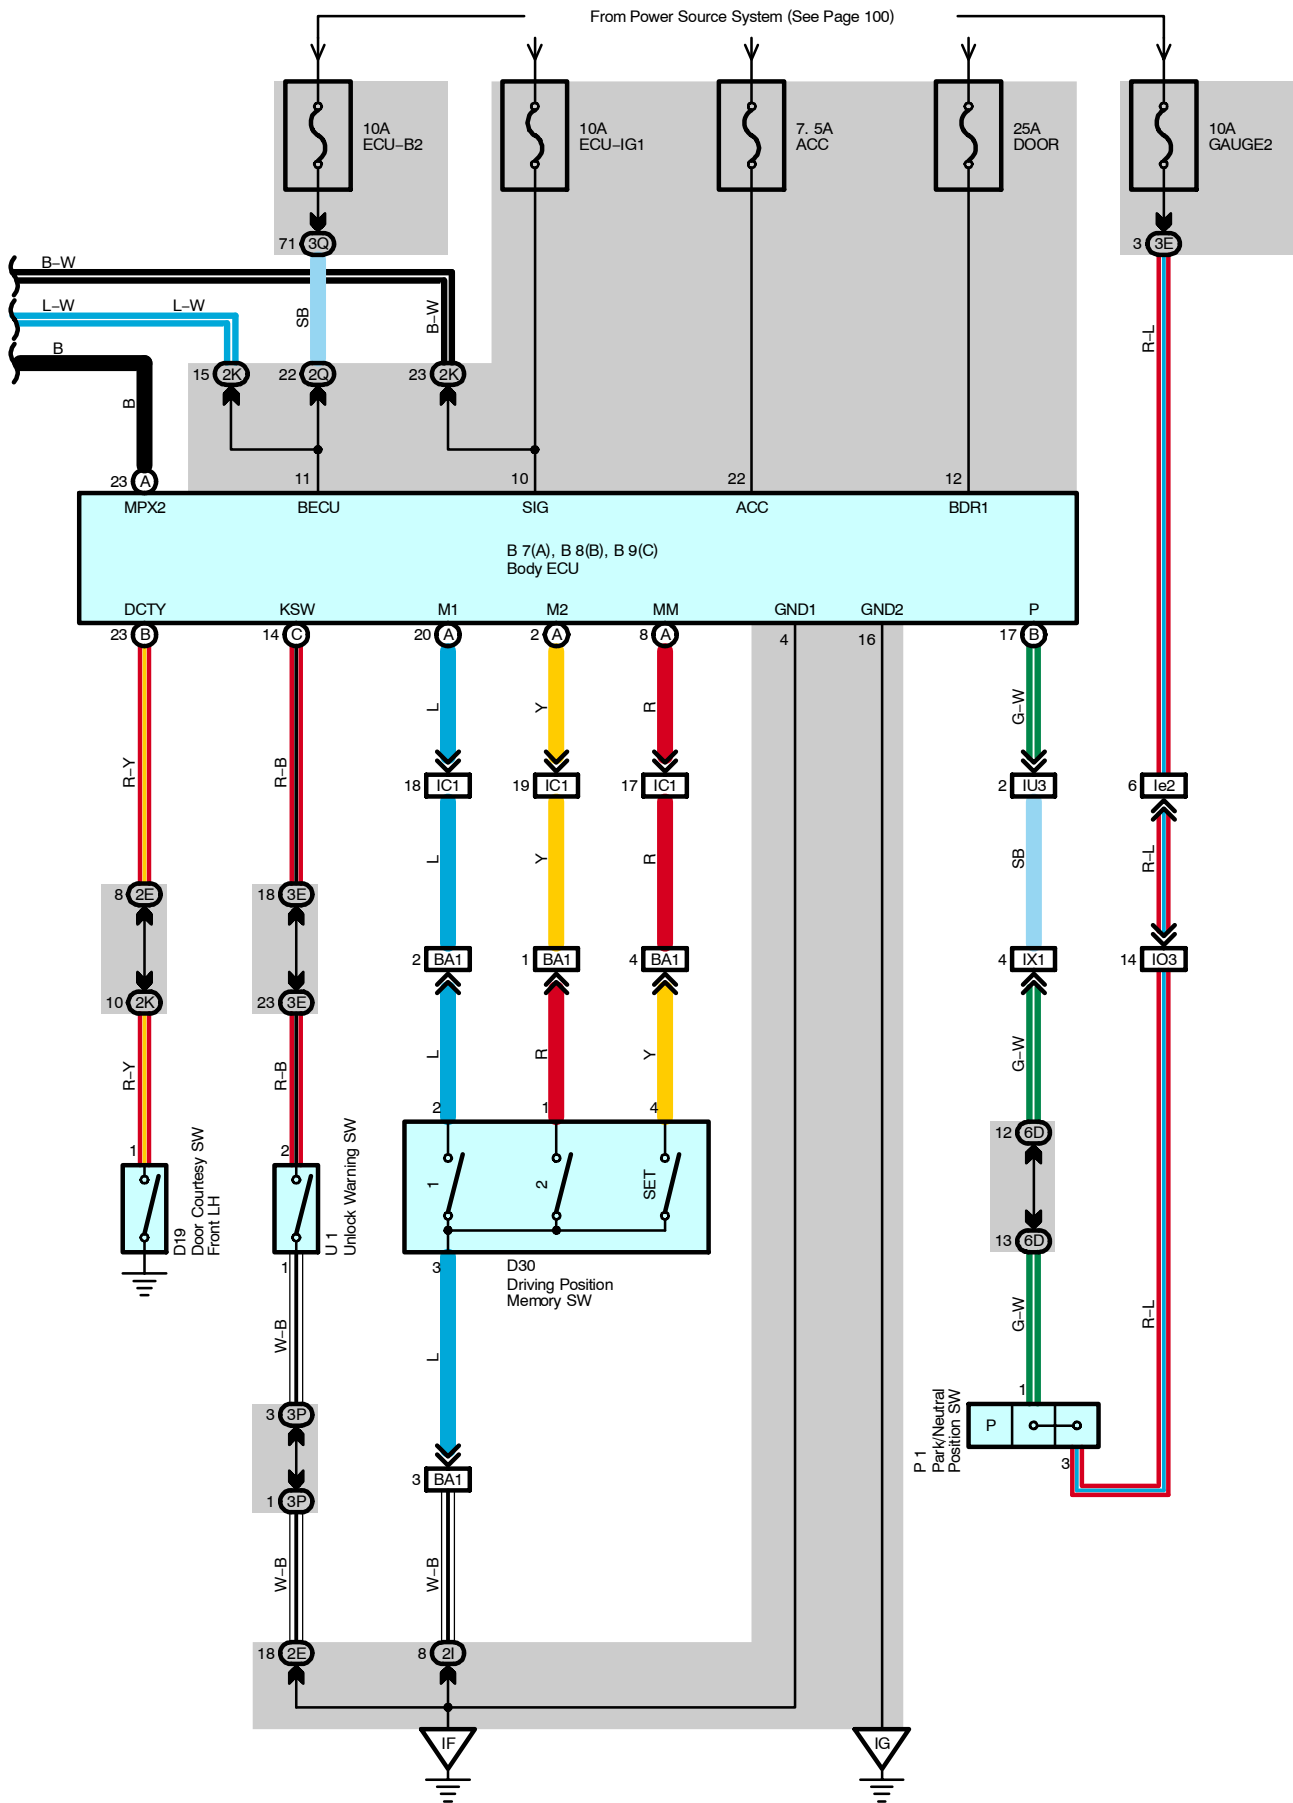

Power Seat (Driver's Seat)

System Outline

- * In the power seat system, the power seat ECU receives the operation signal from the power seat control switch via infrared communication to operate each power seat motor and adjust the seat position.
- * In the event that a malfunction occurs during infrared communication, this system has a fail-safe function to only slide the seat.
- * This system has the following function:
 - * Manual slide operation
 - * Manual reclining control
 - * Manual front vertical control
 - * Manual rear vertical operation
 - * Manual lumbar support operation
 - * Driving position memory function

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B7	A	70	D19	74	S28	76
B8	B	70	D30	74	T8	73
B9	C	70	P1	69	U1	73
C32		71	R30	75		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2I	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3F		
3P	43	
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	80	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC3		
ID4	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
IU3	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
Ie2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
BA1	90	Front Door LH Wire and Front Door Sub Wire (Front Door LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
IG		

