


Automatic Glare-Resistant EC Mirror with Compass

From Power Source System (See Page 100)

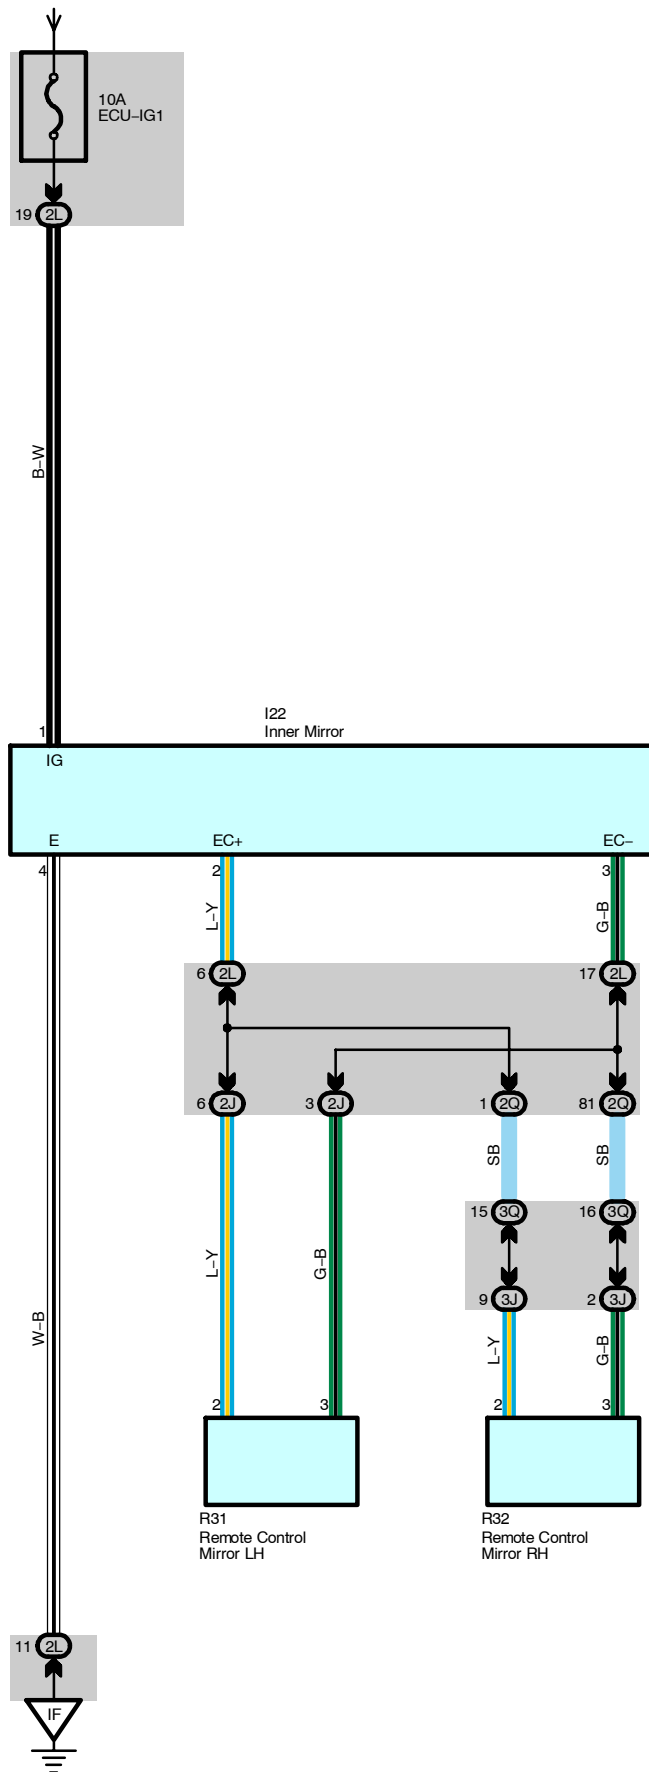

Service Hints

I22 Inner Mirror

- 1-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 4-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
I22	74	R31	75	R32	75

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2J	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3J	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH