


Rear Window Defogger

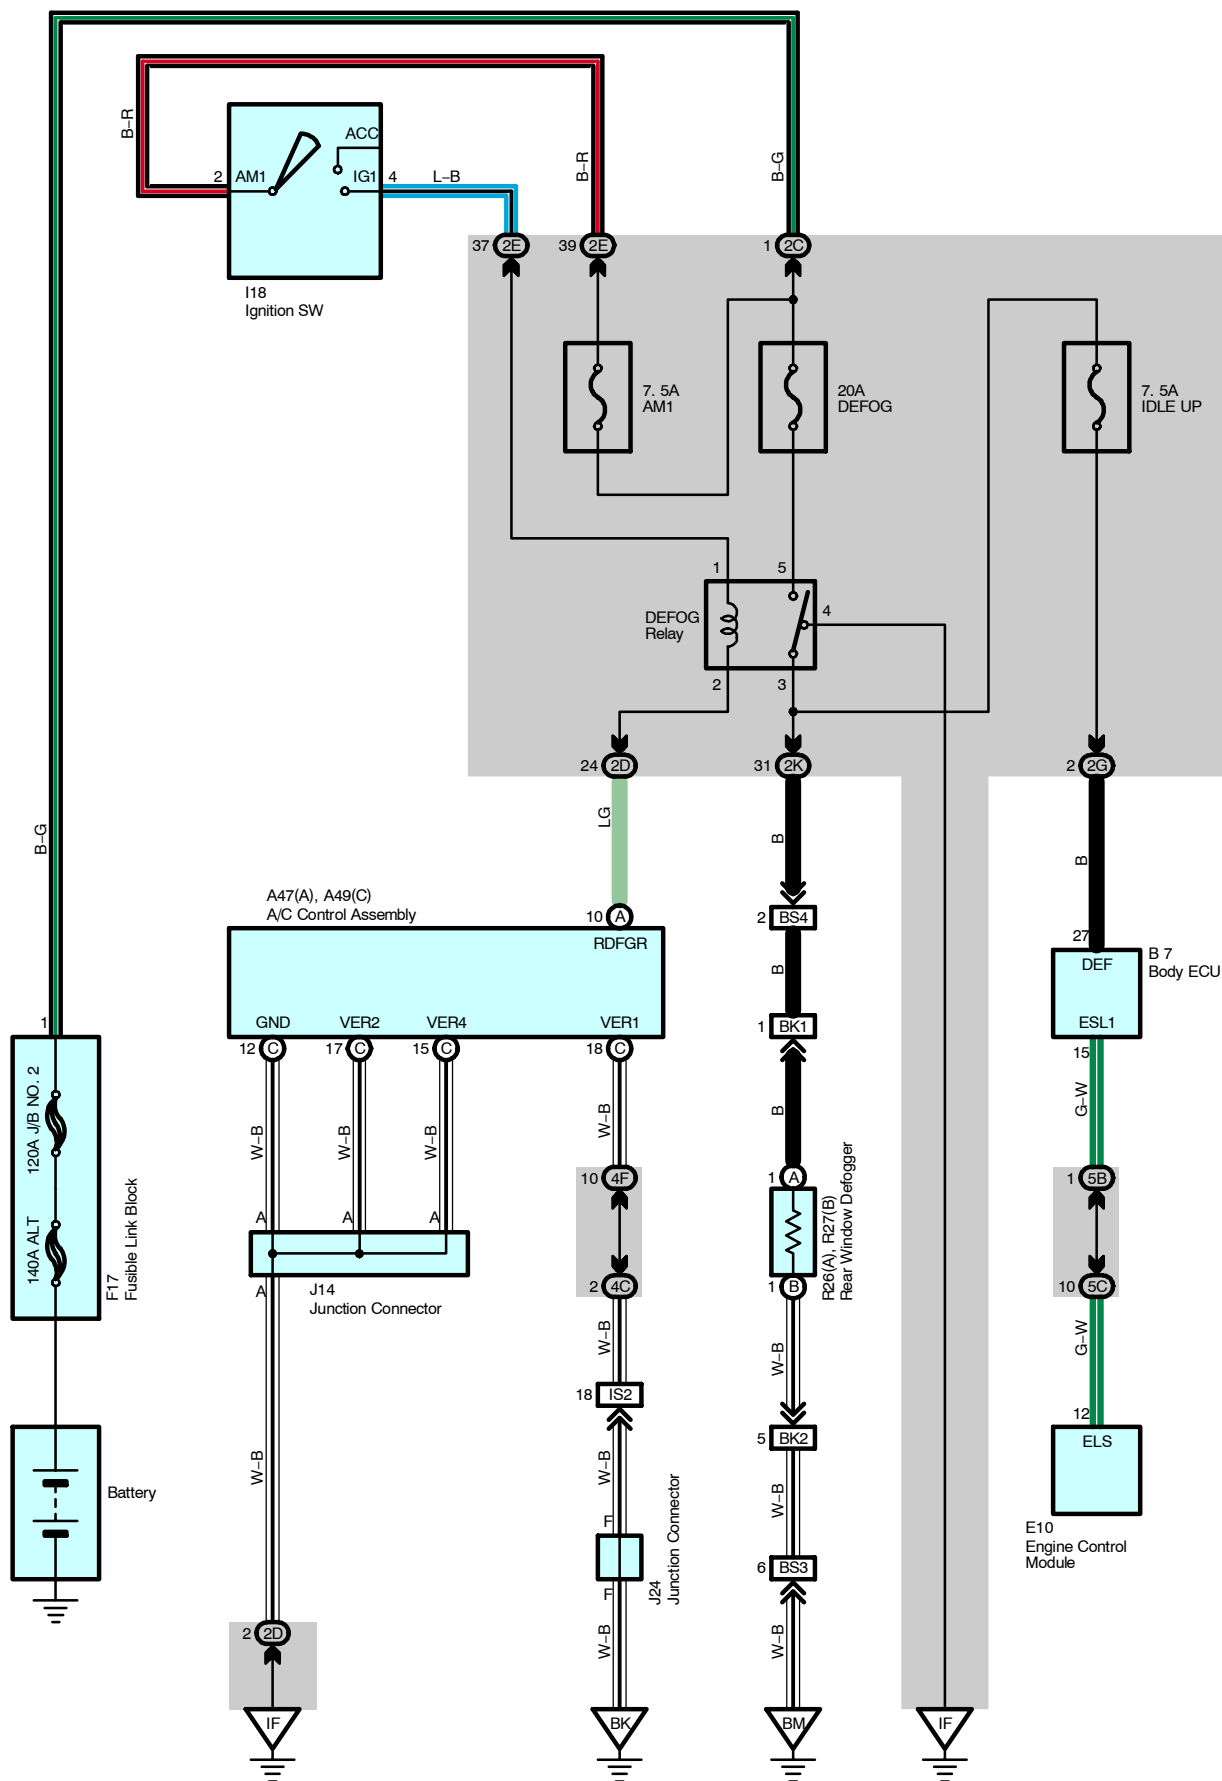

Service Hints

A47 (A), A49 (C) A/C Control Assembly

(A)10–Ground : Approx. 12 volts with ignition SW at ON or ST position

(C)12, (C) 15, (C) 17, (C) 18–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A47 A	70	F17	68	R26 A	75
A49 C	70	I18	71	R27 B	75
B7	70	J14	72		
E10	71	J24	74		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2G		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
4C	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4F		
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IS2	84	Dash Wire and Floor No.2 Wire (Right Kick Panel)
BK1	92	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		
BS3	94	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BS4		

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
BK	90	Front Side Under the Front Passenger's Seat
BM	90	Left Rear Side Quarter Panel