



Key Reminder

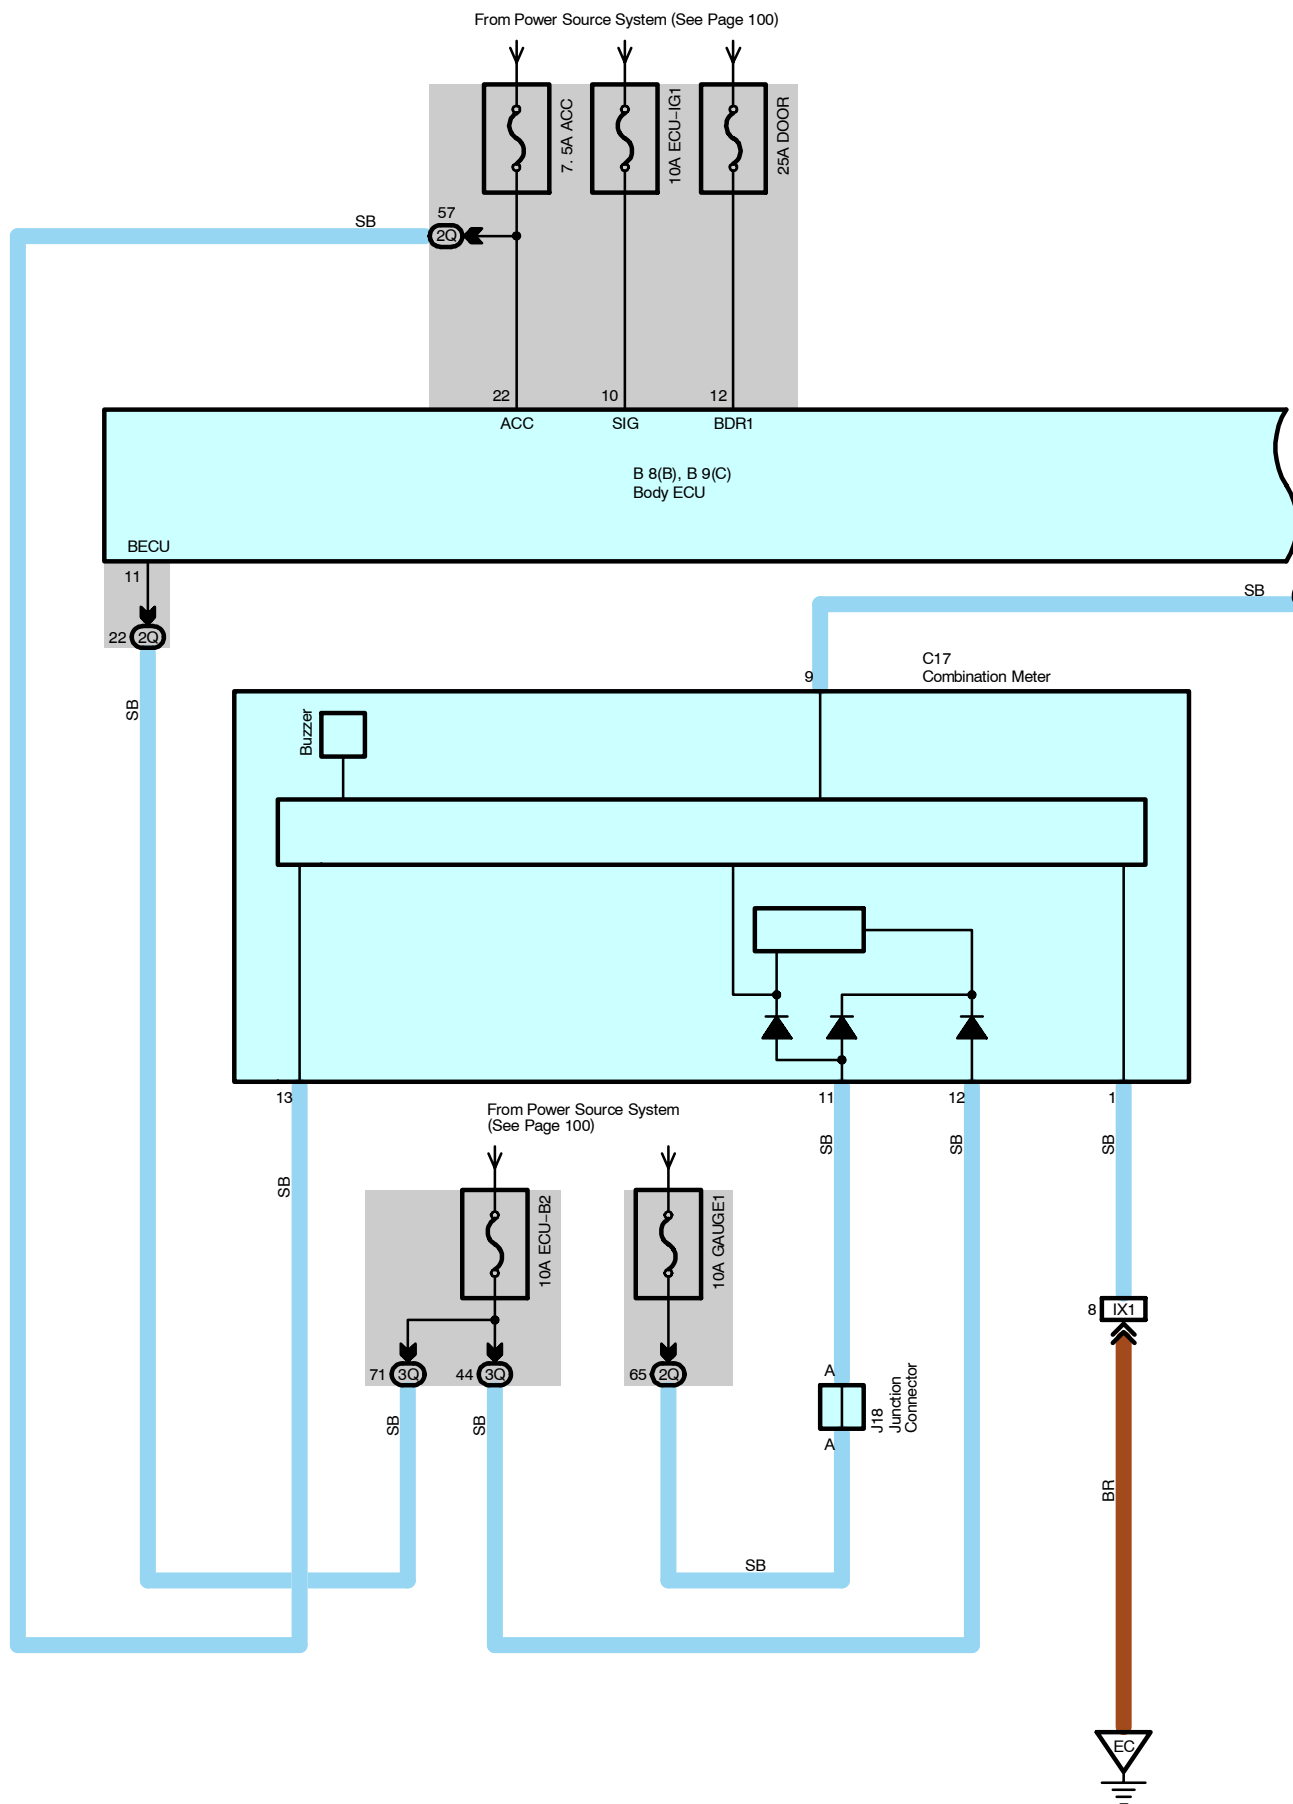

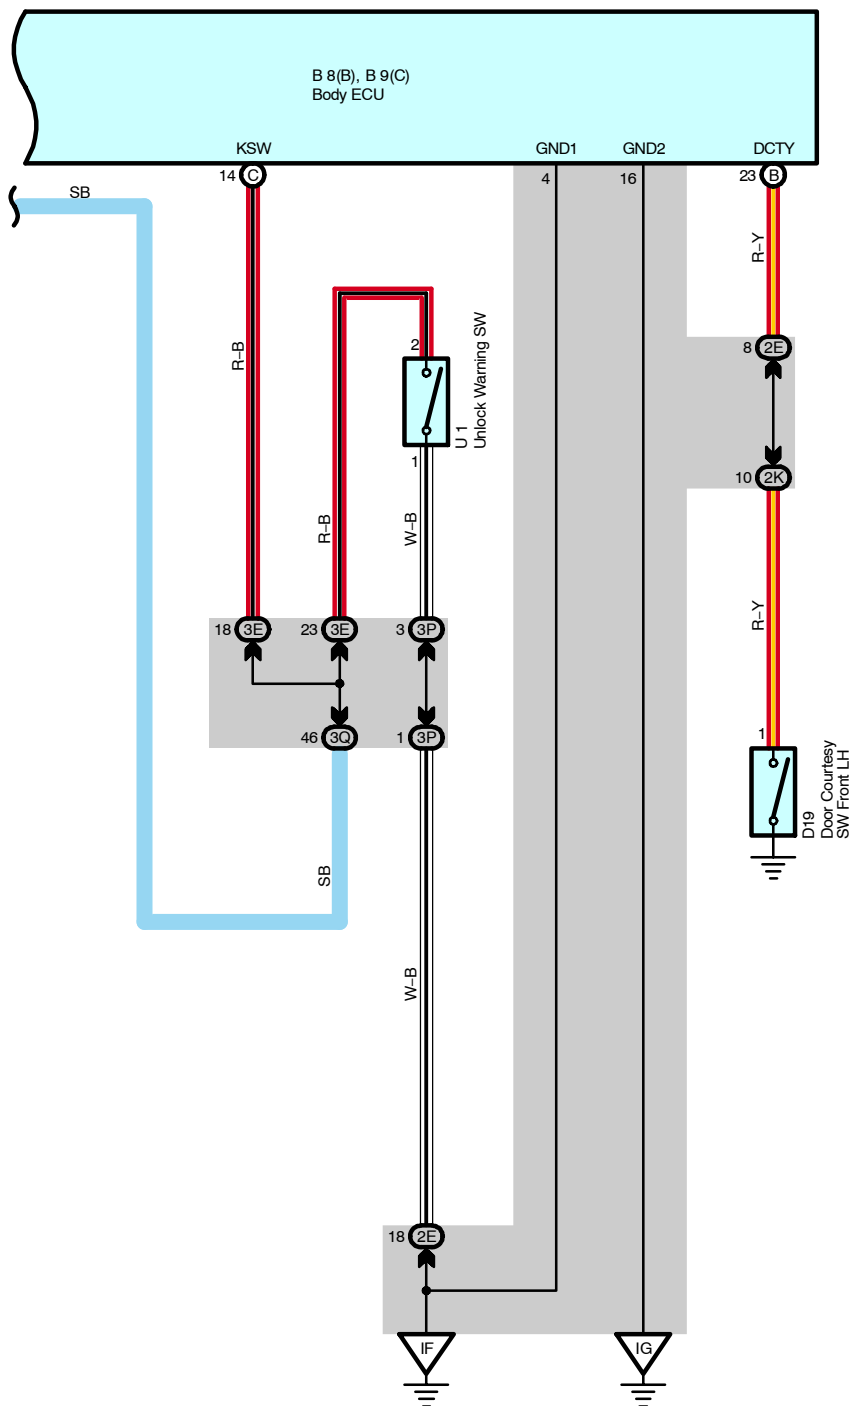

Key Reminder

System Outline

When the driver door is opened with the ignition SW off and ignition key remaining in the key cylinder (Unlock warning SW on), a signal is input from the unlock warning SW to the combination meter TERMINAL 9, the body ECU TERMINAL (C) 14, and from the door courtesy SW front LH to the body ECU TERMINAL (B)23. As a result, the buzzer in the combination meter goes on and warns the driver that the key is remaining in the key cylinder.

Service Hints

D19 Door Courtesy SW Front LH

1-Ground : Closed with driver's door open

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B8	B	70	C17	71		J18	72	
B9	C	70	D19	74		U1	73	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3P	43	
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
IF	80	Set Bolt of Cowl Side J/B LH
IG		

