


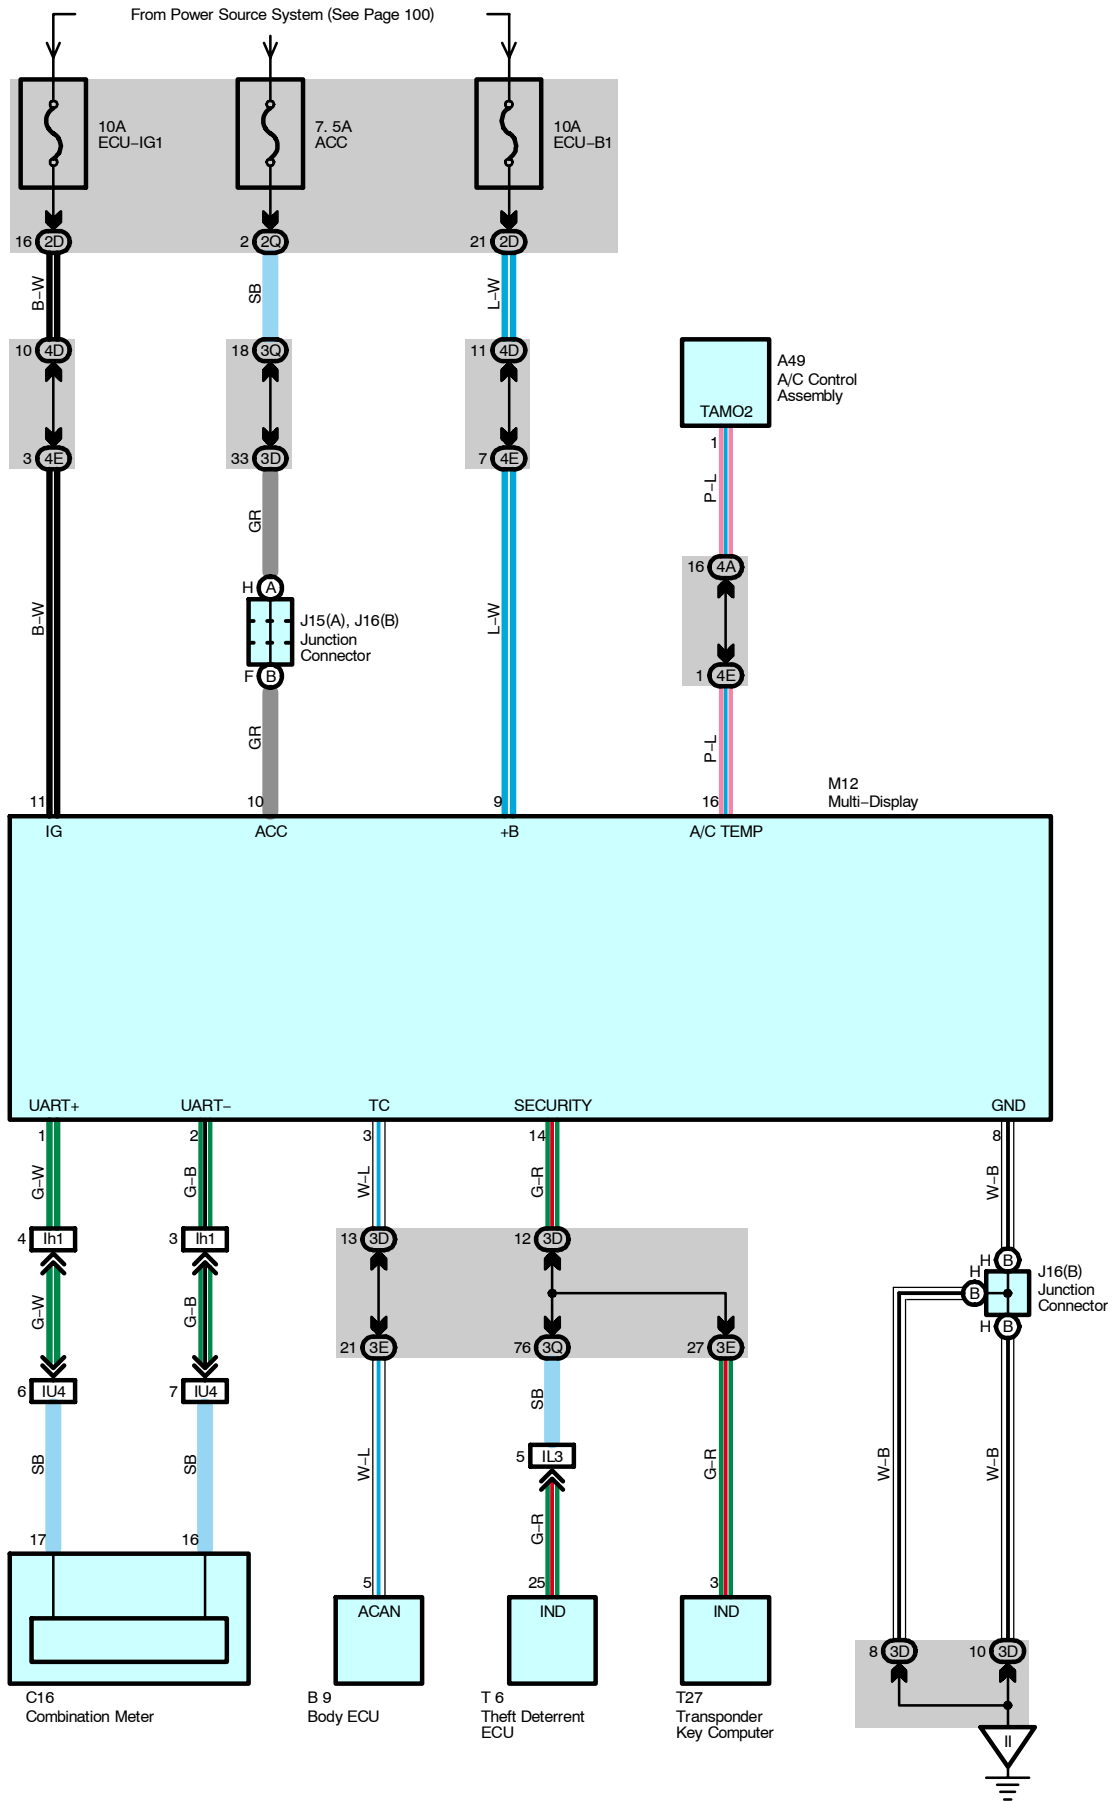

Service Hints

M12 Multi-Display

- 9-Ground : Always approx. 12 volts
- 10-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 11-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 8-Ground : Always continuity

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
A49	70	J15	A	72	T6	73
B9	70	J16	B	72	T27	73
C16	71	M12		72		

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4D		
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL3	82	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IU4	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
Ih1	88	Dash Wire and Dash Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
II	80	Set Bolt of Cowl Side J/B RH