



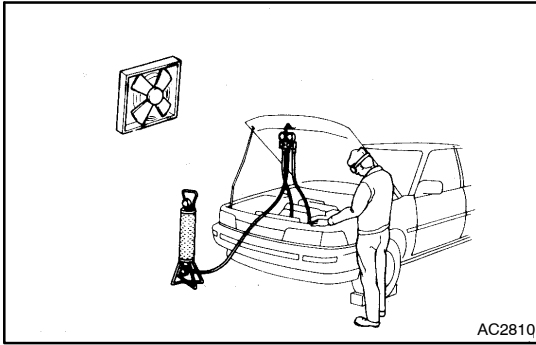

AIR CONDITIONING SYSTEM PRECAUTION

AC1JS-05

1. **DO NOT HANDLE REFRIGERANT IN AN ENCLOSED AREA OR NEAR AN OPEN FLAME**
2. **ALWAYS WEAR SAFETY GLASSES FOR EYE PROTECTION**

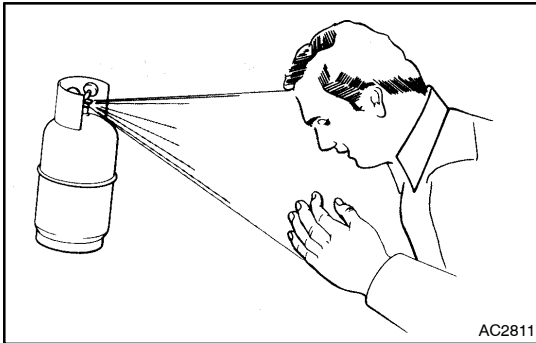

3. **AVOID YOUR EYES AND SKIN TO CONTACT WITH LIQUID REFRIGERANT**

If you get the liquid refrigerant in your eyes or on your skin:

- (a) Wash out the area with lots of cold water.

CAUTION:


Do not rub your eyes or skin.

- (b) Apply clean petroleum jelly to the skin.
- (c) Go immediately to a physician or hospital for professional treatment.

4. **NEVER HEAT CONTAINER OR EXPOSE IT TO NAKED FLAME**

5. **BE CAREFUL NOT TO DROP CONTAINER AND NOT TO APPLY PHYSICAL SHOCKS TO IT**

Do not drop container nor apply physical shocks to it.

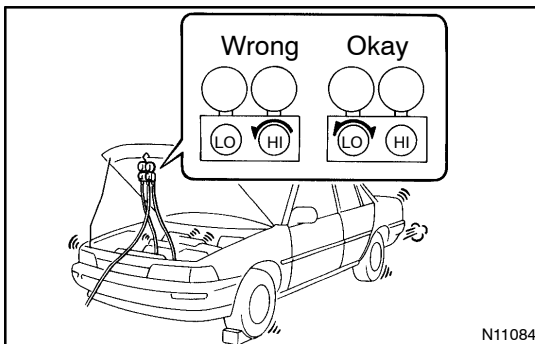

6. **DO NOT OPERATE COMPRESSOR WITHOUT ENOUGH REFRIGERANT IN REFRIGERANT SYSTEM**

If there is not enough refrigerant in the refrigerant system, oil lubrication will be insufficient and compressor burnout may occur. To avoid this, always keep enough refrigerant in the refrigerant system.

7. **DO NOT OPEN HIGH PRESSURE MANIFOLD VALVE WHILE COMPRESSOR IS OPERATING**

If the high pressure valves opened, refrigerant flows in the reverse direction and could cause the charging cylinder to rupture, so open and close the only low pressure valve.

8. **DO NOT OVERCHARGE REFRIGERANT SYSTEM WITH REFRIGERANT**

If refrigerant is overcharged, it causes problems such as insufficient cooling, poor fuel economy, engine overheating etc.

9. SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The LEXUS LX470 is equipped with SRS (Supplemental Restraint System) such as the driver airbag and the front passenger airbag. Failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in the RS section.