


AIR INLET TEMPERATURE SENSOR INSPECTION

AC1LQ-05

1. REMOVE FRONT SEATS
2. REMOVE REAR CONSOLE BOX
3. REMOVE FRONT CONSOLE BOX COVER
4. REMOVE LOWER CENTER CLUSTER FINISH PANEL
5. REMOVE FRONT DOOR SCUFF PLATES
6. REMOVE COWL SIDE TRIMS
7. REMOVE REAR DOOR SCUFF PATES
8. REMOVE CENTER PILLAR GARNISHES
9. REMOVE AIR INLET TEMPERATURE SENSOR
- (a) Slide the floor carpet backward.

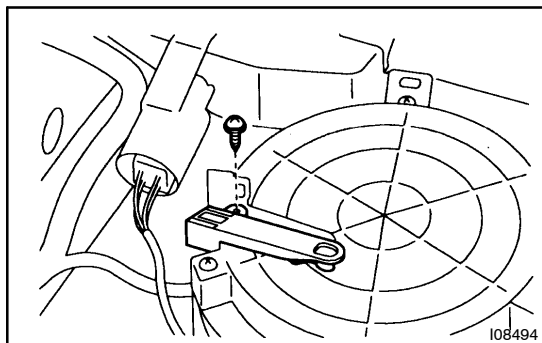

- (b) Disconnect the connector.
- (c) Remove the screw and the air inlet temperature sensor.
10. **INSPECT AIR INLET TEMPERATURE SENSOR CIRCUIT (See page [DI-1790](#))**
11. **INSTALL AIR INLET TEMPERATURE SENSOR**
 - (a) Install the air inlet temperature sensor with the screw.
 - (b) Connect the connector.
 - (c) Install the floor carpet.
12. **INSTALL CENTER PILLAR GARNISHES**
13. **INSTALL REAR DOOR SCUFF PLATES**
14. **INSTALL COWL SIDE TRIMS**
15. **INSTALL FRONT DOOR SCUFF PLATES**
16. **INSTALL REAR CONSOLE BOX**
17. **INSTALL FRONT SEATS**