


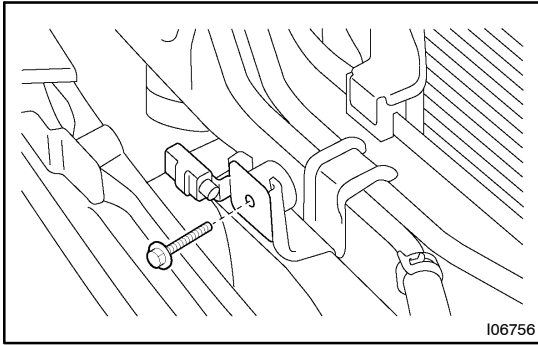

AMBIENT TEMPERATURE SENSOR INSPECTION

AC1LP-06

- 1. REMOVE AMBIENT TEMPERATURE SENSOR**
 - (a) Disconnect the connector.
 - (b) Remove the bolt and the ambient temperature sensor.
- 2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page [DI-1764](#))**
- 3. INSTALL AMBIENT TEMPERATURE SENSOR**
 - (a) Install the ambient temperature sensor to the condenser upper bracket.
 - (b) Connect the connector.