



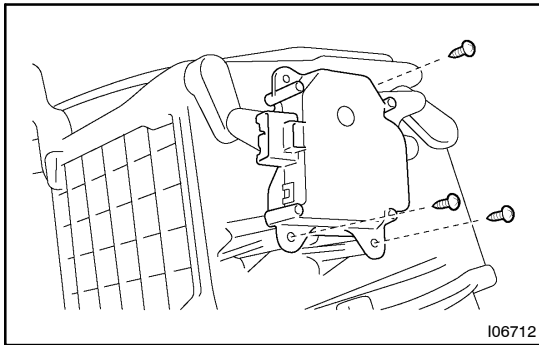

DISASSEMBLY


1. REMOVE AIR INLET SERVOMOTOR

Remove the 3 screws and the air inlet servomotor.

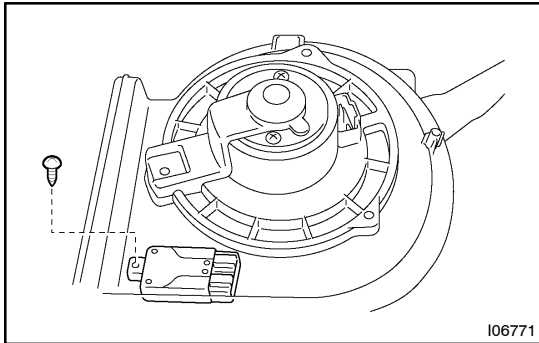

2. REMOVE BLOWER MOTOR CONTROL RELAY

- (a) Disconnect the connector.
- (b) Remove the screw and the blower motor control relay.

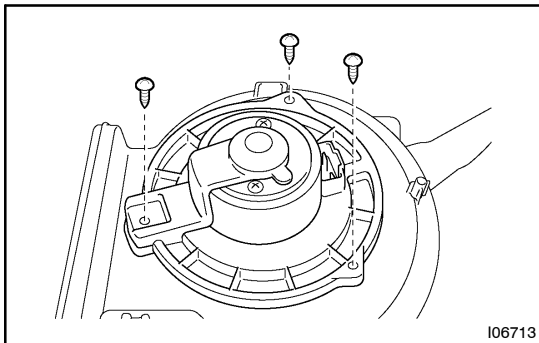

3. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and the blower motor.

4. REMOVE WIRE HARNESS

Remove the screw and the wire harness.