



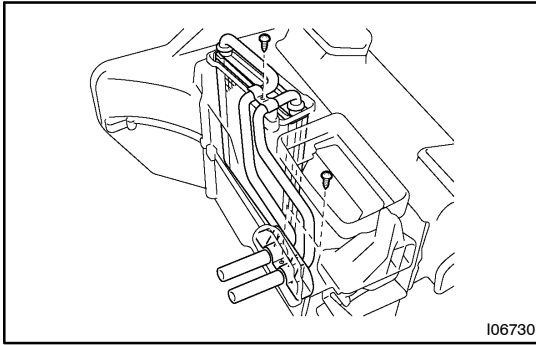

DISASSEMBLY


1. REMOVE HEATER RADIATOR

- (a) Pry out the packing.
- (b) Remove the screw and the bracket.
- (c) Remove the screw and the clamp.
- (d) Pull out the heater radiator.

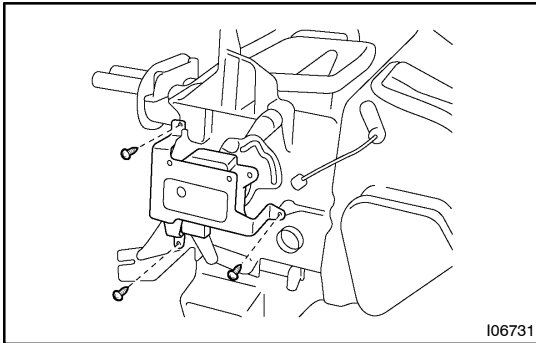


2. REMOVE AIR OUTLET SERVOMOTOR

Remove the 3 screws and the air outlet servomotor.

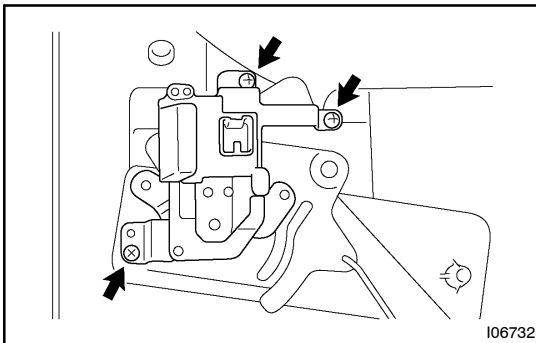


3. REMOVE AIR MIX SERVOMOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and the air mix servomotor.
- (c) Release the claw and remove the wire harness.

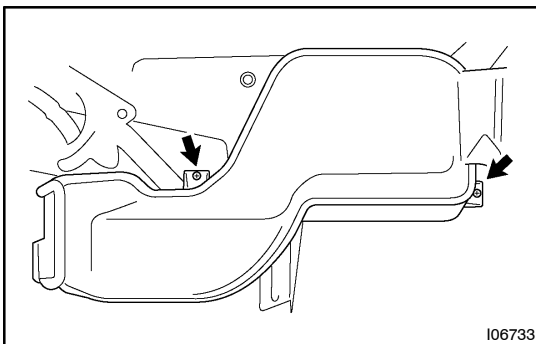

4. REMOVE AIR DUCT (Foot Duct)

Remove the 2 screws and air duct.

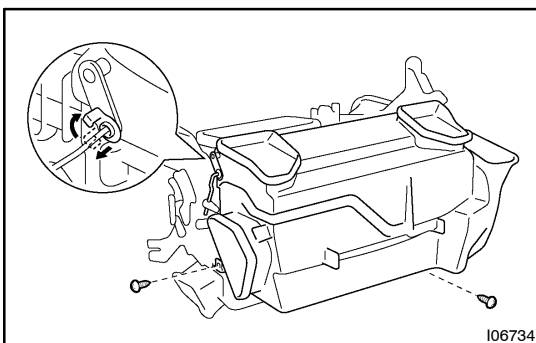

5. REMOVE AIR DUCT (Vent Duct)

- (a) Disconnect the mode damper control link.
- (b) Remove the 2 screws and the air duct.