


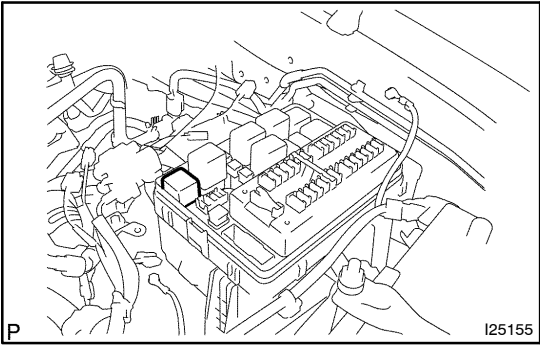


# HEATER MAIN RELAY INSPECTION

AC3PF-01

## 1. REMOVE HEATER MAIN RELAY

Remove the heater main relay.

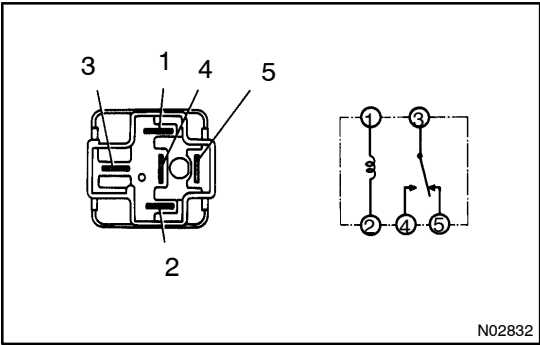

## 2. INSPECT HEATER MAIN RELAY CONTINUITY

| Condition                           | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant                            | 1 - 2<br>3 - 4    | Continuity          |
| Apply B+ between terminals 1 and 2. | 3 - 5             | Continuity          |

If continuity is not as specified, replace the relay.

## 3. INSTALL HEATER MAIN RELAY