


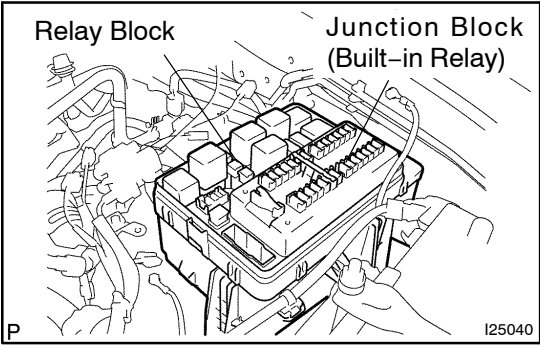

REAR HEATER RELAY INSPECTION

AC3PG-01

HINT:
The rear heater relay is built in the engine room junction block. Since the relay is constructed with a relay block that is in the junction block as a unit, it is impossible to disconnect the wire harness connecting with the relay block.
If the relay has a malfunction, replace it with the junction block assembly wireharness together.

- 1. REMOVE ENGINE ROOM J/B
- 2. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	29 – 31	Continuity
Apply B+ between terminals 29 and 31.	2 – 3	Continuity

If continuity is not as specified, replace the engine room J/B.

- 3. INSTALL ENGINE ROOM J/B

