


INSPECTION

1. INSPECT HEATER RADIATOR

If the fins are clogged, clean them with compressed air.

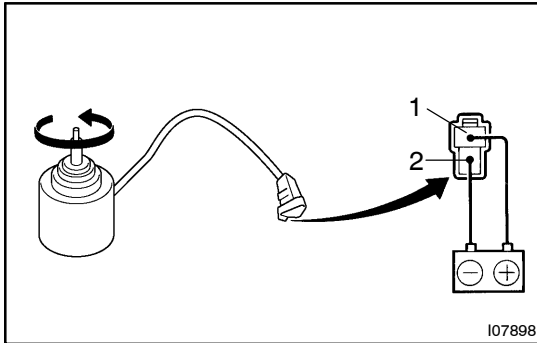

2. INSPECT BLOWER MOTOR OPERATION

Connect battery positive (+) lead to terminal 1 and battery negative (-) lead to terminal 2, then check that the motor rotates smoothly.

If operation is not as specified, replace the blower motor.

3. INSPECT AIR MIX SERVOMOTOR (See page [DI-1808](#))

4. INSPECT AIR MIX DAMPER POSITION SENSOR (See page [DI-1799](#))