


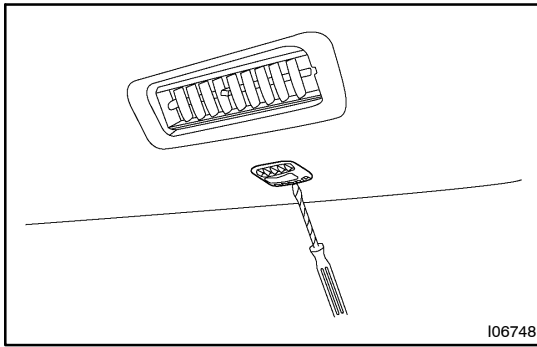

ROOM TEMPERATURE SENSOR (for Rear A/C) INSPECTION

AC1LD-06

1. REMOVE ROOM TEMPERATURE SENSOR

Using a screwdriver, pull out the room temperature sensor, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

2. INSPECT ROOM TEMPERATURE SENSOR (See page [DI-1778](#))

3. INSTALL ROOM TEMPERATURE SENSOR

- (a) Connect the connector.
- (b) Insert the room temperature sensor to the roof headlining.