


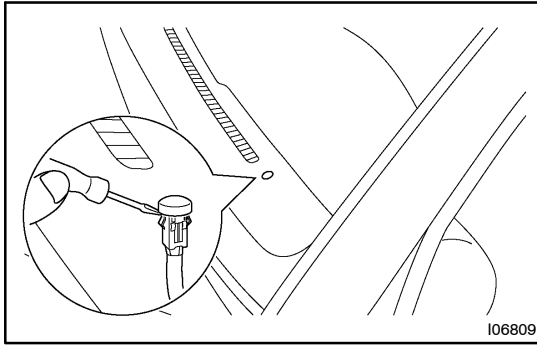

SOLAR SENSOR INSPECTION

AC1LM-06

1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the solar sensor, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

2. INSPECT SOLAR SENSOR CIRCUIT

(See page [DI-1781](#))

3. INSTALL SOLAR SENSOR

- (a) Connect the connector.
- (b) Insert the solar sensor to the instrument panel.