


REMOVAL

1. REMOVE RADIATOR GRILLE SUB-ASSY


- (a) Remove the 3 screws.
- (b) Release the 2 clips and remove the radiator grille sub-assy.

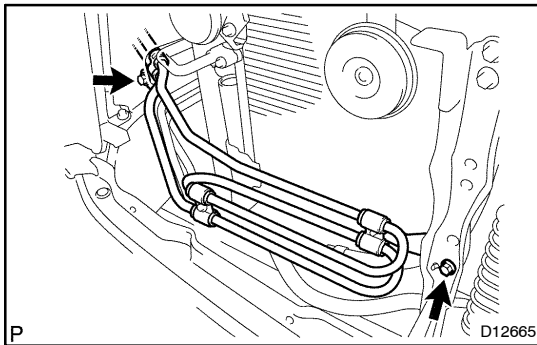

2. SEPARATE POWER STEERING OIL COOLER SUB-ASSY


Remove the 2 bolts and separate the power steering oil cooler sub-assy.

Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)

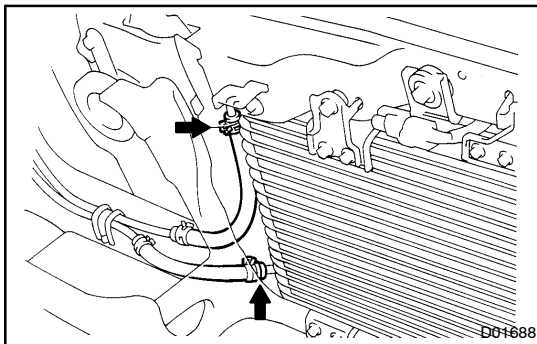


3. REMOVE OIL COOLER

- (a) Loosen the 2 clips and disconnect the 2 hoses.

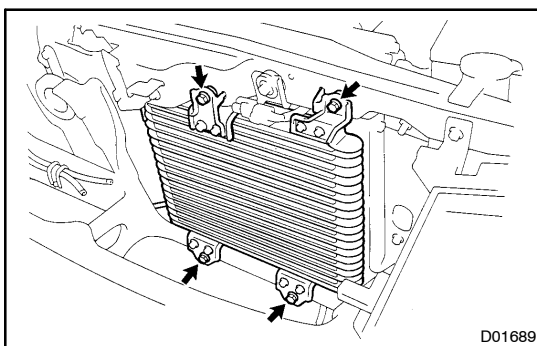


- (b) Remove the 4 bolts and oil cooler.
- Torque: 12 N·m (117 kgf·cm, 8 ft·lbf)**

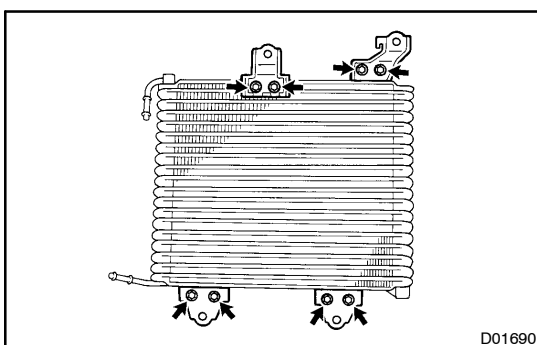


- (c) Remove the 8 bolts, the 2 oil cooler brackets and the 2 stays.

Torque: 4.9 N·m (50 kgf·cm, 43 in·lbf)

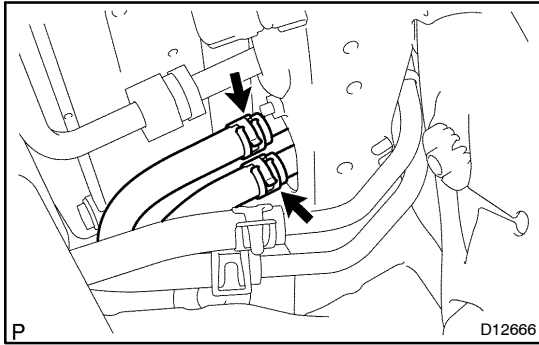**4. REMOVE OIL COOLER PIPE BRACKET**

- (a) Loosen the 2 clips and disconnect the 2 hoses.

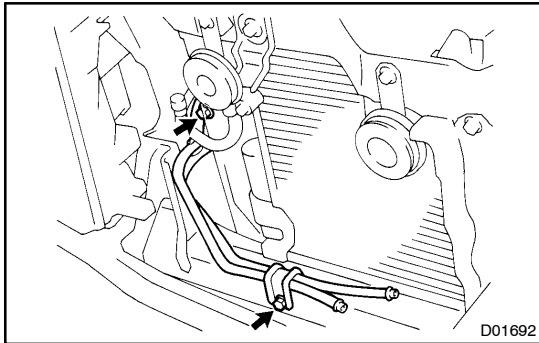

- (b) Remove the 2 bolts and the oil cooler pipe bracket.
Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)
- (c) Loosen the 2 clips and disconnect the 2 hoses.