


## DISASSEMBLY

1. REMOVE STEERING WHEEL(See page [SR-14](#))
2. REMOVE SPIRAL CABLE(See page [RS-15](#))

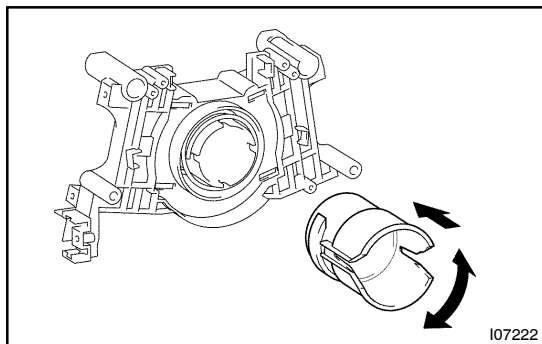

### 3. REMOVE CANCEL CAM

Turn the cancel cam as pressing it, and pull it out.