


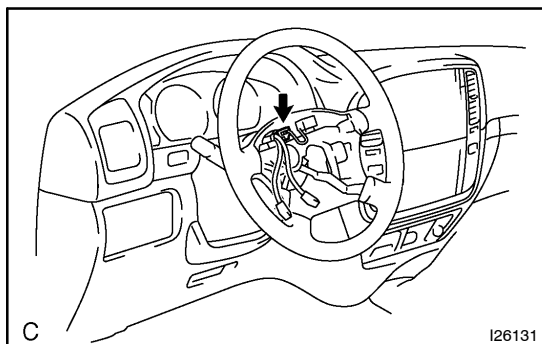

INSPECTION


1. INSPECT HORN SWITCH

- Disconnect the negative (-) terminal from the battery.
- Remove the left and right covers from the steering wheel.
- Using a torx socket wrench, loosen the 2 bolts.
- Pull up the horn pad and place it on the steering column, as shown.

HINT:

Do not disconnect the connector from the horn pad.

- Disconnect the connector from the slip ring.

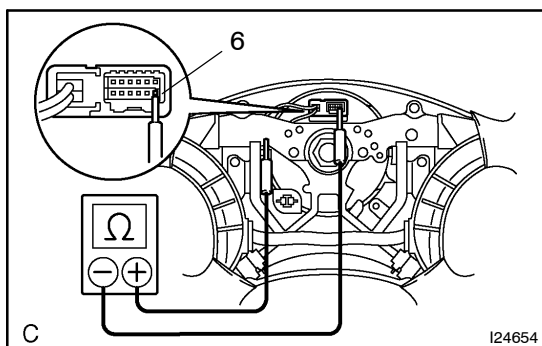


- Check that no continuity exists between terminal 6 of the connector and body ground.
- Check that continuity exists between terminal 6 of the connector and body ground when the horn contact plate is pressed against the steering spoke assembly.

If continuity is not as specified, repair or replace the steering wheel or the wire harness as necessary.

- Install the horn pad in place and using a torx socket wrench, torque the 2 bolts.

Torque: 7.1 N·m (72 kgf·cm, 62 in·lbf)


- Install the left and right covers.
- Connect the negative (-) terminal to the battery.

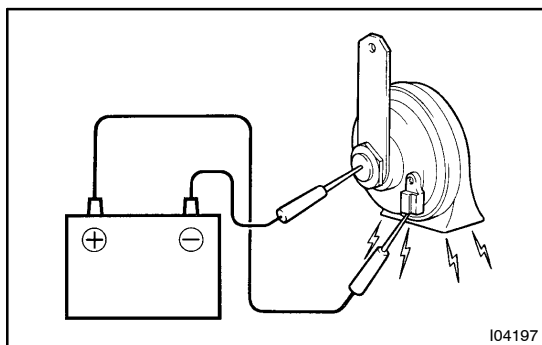

2. INSPECT HORN OPERATION

Connect the battery positive (+) lead to the terminal and the battery negative (-) lead to the horn body, and check that the horn blows.

If operation is not as specified, replace the horn.

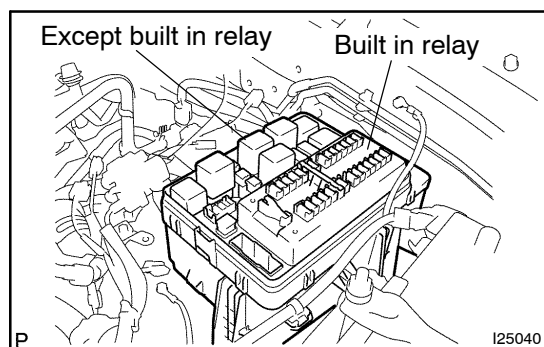

**3. INSPECT HORN RELAY:
INSPECT ENGINE ROOM J/B RELAY CIRCUIT
(See Page [BE-16](#))**

HINT:

The horn relay is built in engine room junction block. Also, the relay is constructed with a relay block that is in the junction block as a unit. To disconnect the wire harness connecting with relay block is impossible. If the relay has a malfunction, replace it with junction block assembly wire harness together.