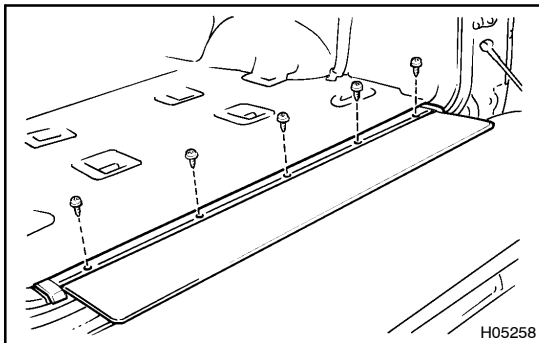


REMOVAL

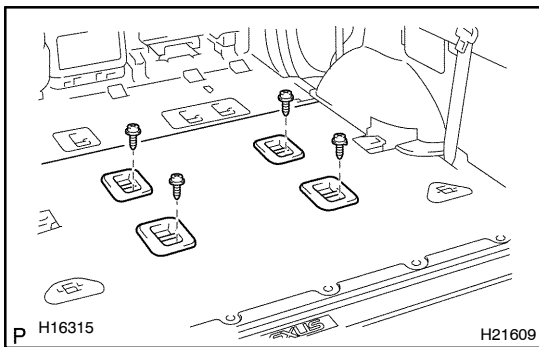
1. **REMOVE REAR NO. 2 SEATS** (See page [BO-163](#))
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
2. **REMOVE REAR NO. 1 SEATS**
(See page [BO-149](#) and [BO-157](#))
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
 - (a) Fold the seatback down.
 - (b) Unlock the seat lock, and swing the whole seat up and forward.
 - (c) Remove the 4 bolts and the rear No. 1 seat.
3. **REMOVE REAR FLOOR MAT PLATES**
Remove the 4 screws and the 2 rear floor mat plate.



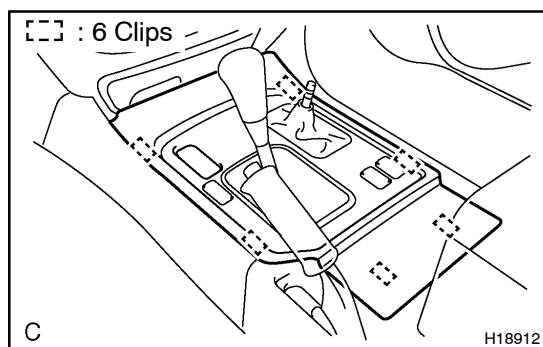
4. **REMOVE REAR MAT SET PLATE**
 - (a) Remove the 5 screws.
 - (b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.



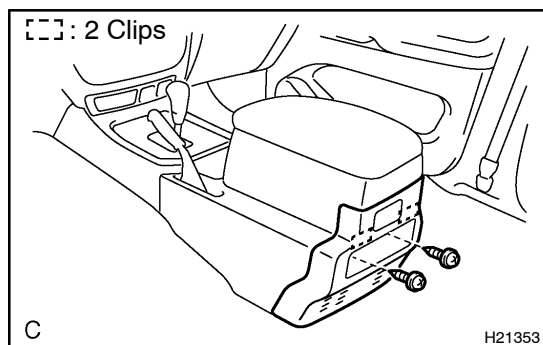
5. **REMOVE NO. 3 REAR SEAT PROTECTOR**
Remove the 4 screws and the No. 3 rear seat protectors.
6. **REMOVE NO. 3 SEAT FRONT BRACKET COVER**
Remove the 2 screw and the No. 3 seat front bracket covers.
7. **REMOVE NO. 3 SEAT BRACKET SUPPORT COVERS**
8. **REMOVE NO. 1 SEAT PROTECTOR**
Remove the screw and the No. 1 rear seat protector.
9. **REMOVE NO. 2 REAR SEAT PROTECTOR**
Remove the 2 screws and the No. 2 rear seat protector.
10. **REMOVE FRONT SEAT** (See page [BO-135](#))
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)
 - (a) Remove the 3 CRS tether anchor bracket covers.
 - (b) Remove the 3 CRS tether anchor brackets.
Torque: 27 N·m (275 kgf·cm, 20 ft·lbf)
11. **REMOVE REAR FLOOR CARPET**

**12. REMOVE REAR CONSOLE PANEL**

- (a) Remove the transfer shift lever knob.
- (b) Using a screwdriver, remove the upper console panel.

HINT:

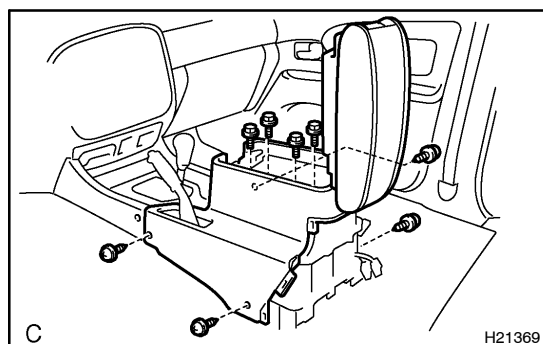
Tape up the screwdriver tip before use.

**13. REMOVE CONSOLE REAR END PANEL**

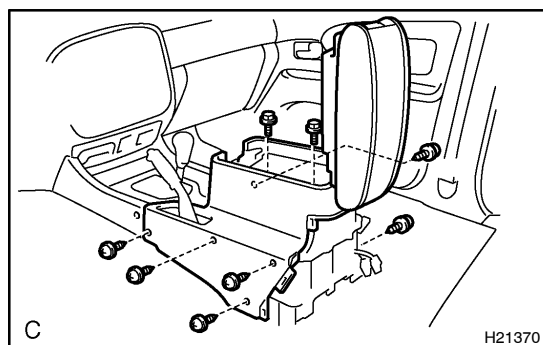
- (a) Remove the rear console cup holder box.
- (b) Remove the 2 screws.
- (c) Using a screwdriver, remove the console rear end panel.

HINT:

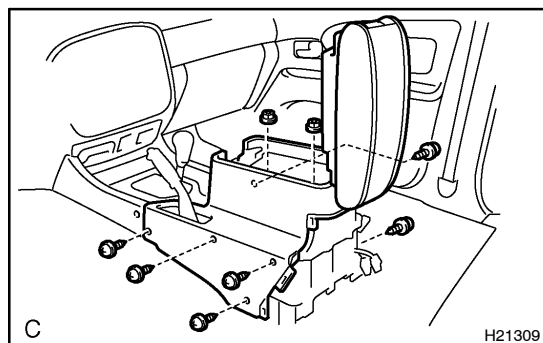
Tape up the screwdriver tip before use.

**14. w/o Disc Player Changer, LEXUS Link System:
REMOVE REAR CONSOLE BOX**

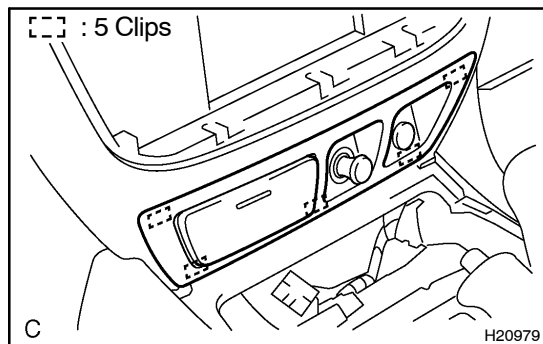
- (a) Remove the 4 bolts, the 4 screws and the rear console box.
- (b) Disconnect the connector.

**15. w/ Disc Player Changer:
REMOVE REAR CONSOLE BOX**

- (a) Remove the 2 bolts, the 6 screws and the rear console box.
- (b) Disconnect the connector.

**16. w/ LEXUS Link System:
REMOVE REAR CONSOLE BOX**

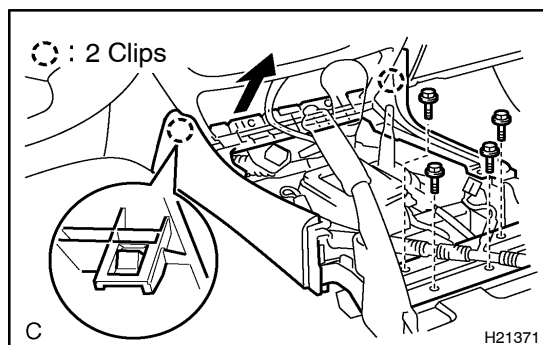
- (a) Remove the 2 nuts, the 6 screws and the rear console box.
- (b) Disconnect the connector.

**17. REMOVE CENTER LOWER CLUSTER FINISH PANEL**

Using a screwdriver, remove the center lower cluster finish panel, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

**18. REMOVE FRONT CONSOLE BOX AND CONSOLE BOX MOUNTING BRACKET NO. 4**

Remove the 4 bolts, front console box and the console box mounting bracket No. 4.

19. REMOVE FRONT DOOR SCUFF PLATE

Using a screwdriver, remove the front door scuff plate.

HINT:

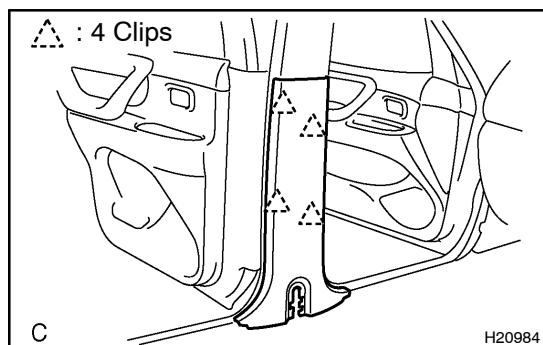
Tape up the screwdriver tip before use.

20. REMOVE REAR DOOR SCUFF PLATE

Using a screwdriver, remove the front door scuff plate.

HINT:

Tape up the screwdriver tip before use.

21. REMOVE FRONT DOOR OPENING TRIM**22. REMOVE REAR DOOR OPENING TRIM****23. REMOVE CENTER PILLAR LOWER GARNISH**

(a) Using a screwdriver, remove the seat belt floor anchor cover caps.

HINT:

Tape up the screwdriver tip before use.

(b) Remove the bolts and the front seat outer belt floor anchors.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

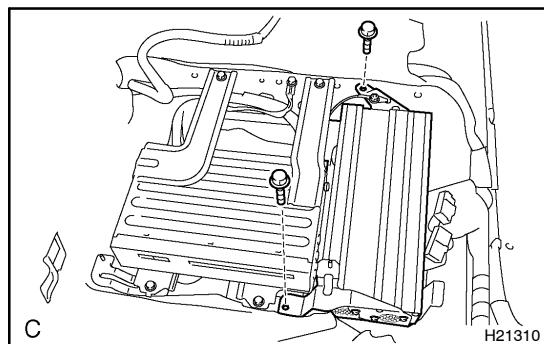
(c) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

24. REMOVE FLOOR CARPET CENTER COVER

Remove the 2 clips and the floor center cover.

**25. w/ Mark Levinson:****REMOVE FRONT FLOOR CARPET**

- (a) Remove the 2 clip and the floor power amplifier cover.
- (b) Remove the 2 bolts and the floor power amplifier.
- (c) Remove the 4 bolts and navigation computer assembly.
- (d) Remove the front carpet.