


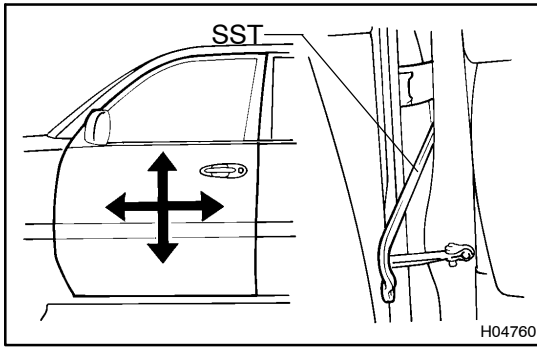


ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Using SST, loosen the body side hinge bolts to adjust them.

SST 09812-00010

Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

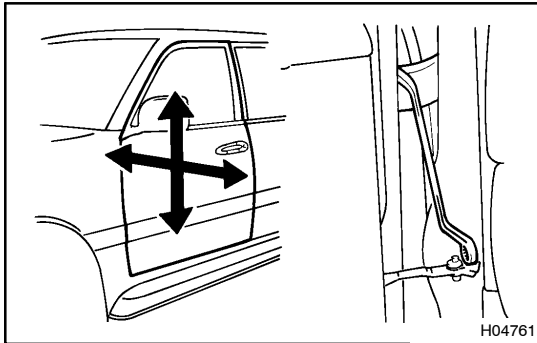


2. ADJUST DOOR IN LEFT / RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust them.

HINT:

Substitute the bolt with washer for the centering bolt.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

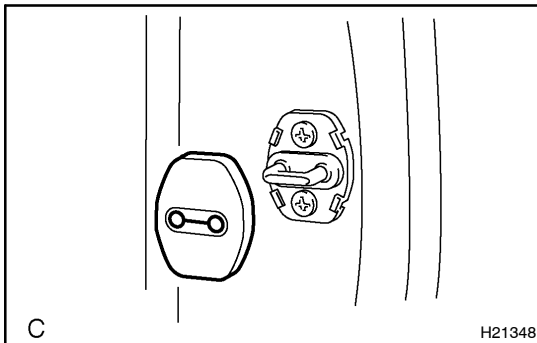


3. ADJUST DOOR LOCK STRIKER

(a) Using a screwdriver, remove the door lock striker cover.

HINT:

Tape up the screwdriver tip before use.

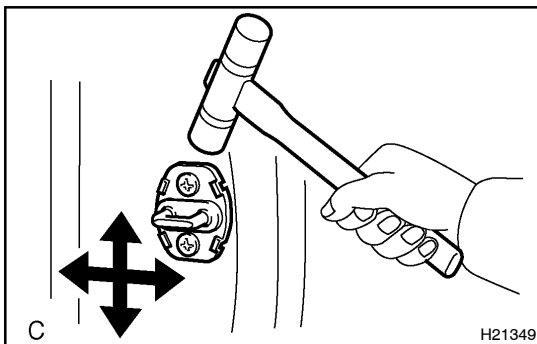

(b) Check that the door fits and the door lock linkages are adjusted correctly.

(c) Loosen the striker mounting screws.

Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

(d) Using a plastic hammer, tap the striker to adjust it.