


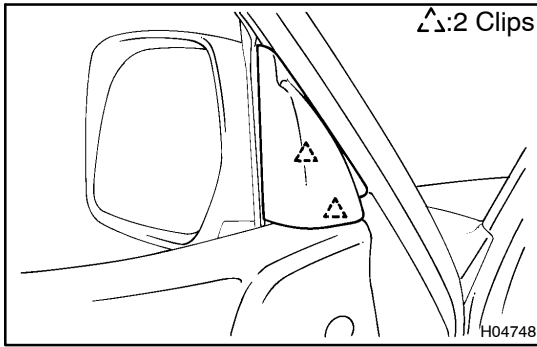


## DISASSEMBLY

### 1. REMOVE LOWER FRAME BRACKET GARNISH

Using a screwdriver, remove the lower frame bracket garnish.

HINT:

Tape up the screwdriver tip before use.

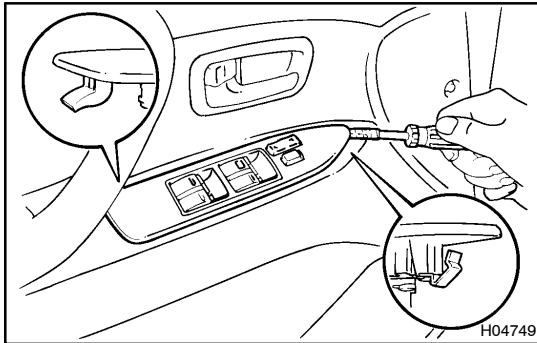


### 2. REMOVE POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Disconnect the connector.

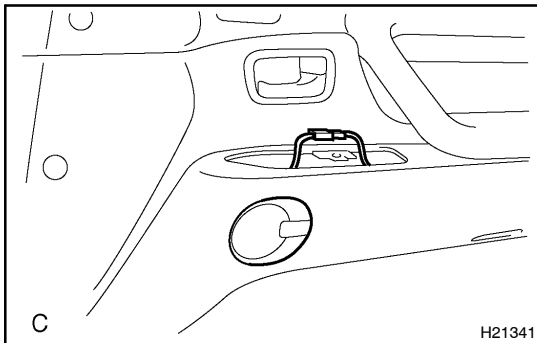


### 3. w/ Mark Levinson:

#### REMOVE CENTER SPEAKER

- (a) Disconnect the connector.
- (b) Using a screwdriver, remove the center speaker.

HINT:

Tape up the screwdriver tip before use.

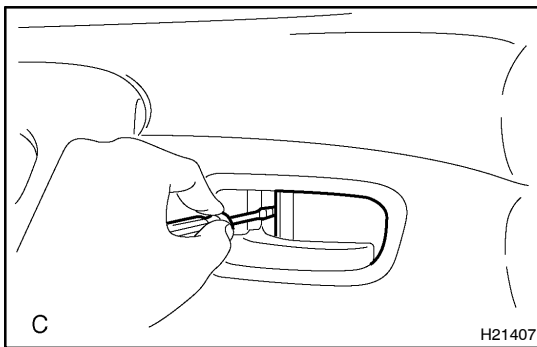


### 4. REMOVE DOOR INSIDE HANDLE BEZEL No. 2

Using a screwdriver, remove the door inside handle bezel No. 2 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

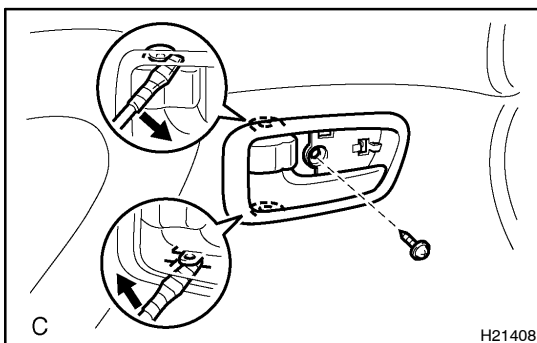


### 5. REMOVE DOOR INSIDE HANDLE BEZEL No. 1

- (a) Remove the screw.
- (b) Using a screwdriver, remove the door inside handle bezel No. 1 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

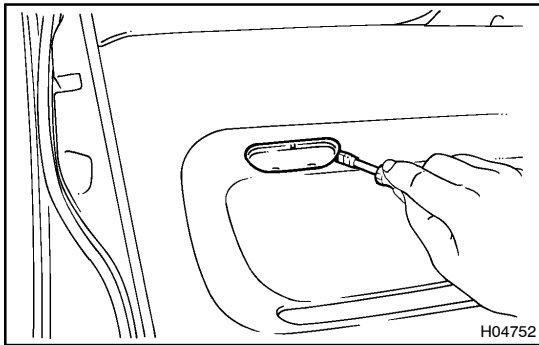

## 6. REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the door courtesy light, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

## 7. REMOVE SEAT MEMORY SWITCH

(a) Using a screwdriver, remove the seat memory switch.

HINT:

Tape up the screwdriver tip before use.

(b) Disconnect the connector.

## 8. REMOVE DOOR TRIM

(a) Remove the 2 caps and the 7 screws.

(b) Remove the 3 clips.

(c) Insert a screwdriver between the door and the door trim to pry the trim.

**NOTICE:**

**Be careful not to damage the door and the door trim.**

HINT:



Tape up the screwdriver tip before use.

(d) Pull the trim upward to remove it.

(e) Using a screwdriver, remove the speaker grille from the door trim.

HINT:

Tape up the screwdriver tip before use.

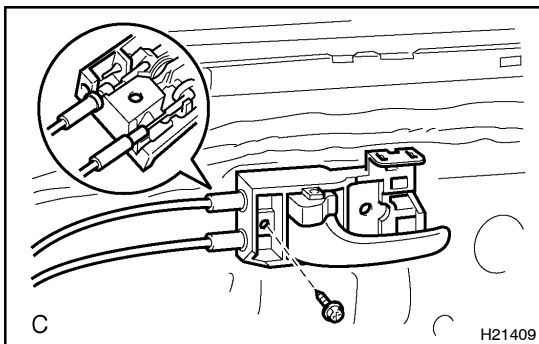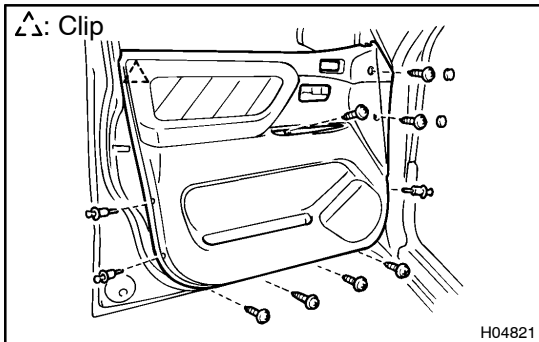

## 9. REMOVE INSIDE HANDLE

(a) Remove the screw and the inside handle.

(b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

## 10. REMOVE TWEETER SPEAKER

Disconnect the connector, then remove the bolt and the tweeter speaker.

## 11. REMOVE OUTSIDE REAR VIEW MIRROR

Disconnect the connector, then remove the 3 bolts and the outside rear view mirror.

## 12. REMOVE SERVICE HOLE COVER

(a) Remove the clamps and the wire harness.


(b) Remove the service hole cover.


**NOTICE:**

**Do not tear the cover.**

HINT:

At the time of reassembly, pull out the 2 control cables and the wire harness through the service hole cover.

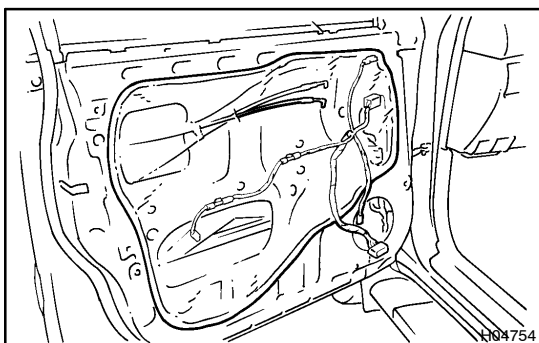

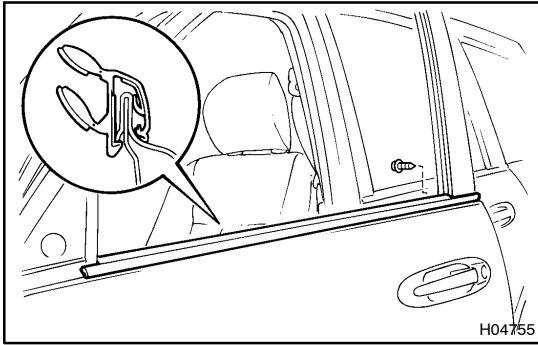**13. REMOVE DOOR BELT MOULDING**

- (a) Remove the screw.
- (b) Using a scraper, remove the door belt moulding.

**HINT:**

Tape up the scraper tip before use.

**14. REMOVE DOOR GLASS**

- (a) Open the door glass until the bolts appear in the service hole.
- (b) Remove the 2 bolts and the door glass.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

**NOTICE:**

**Do not damage the door glass.**

**HINT:**


Pull the glass upward to remove it.

**15. REMOVE SPEAKER**

- (a) Remove the 3 screws and the speaker, then disconnect the connector.
- (b) w/ Mark Levinson:  
Remove the 4 screws and the speaker, then disconnect the connector.

**16. REMOVE DOOR GLASS RUN****17. REMOVE LOWER FRAME**

Remove the bolt and the lower frame.

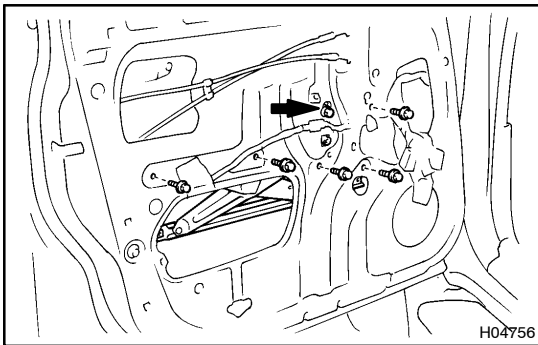
**18. REMOVE WINDOW REGULATOR**

- (a) Disconnect the connector, then remove the 5 bolts.
- (b) Loosen the bolt and the window regulator.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

**HINT:**

Remove the regulator through the service hole.

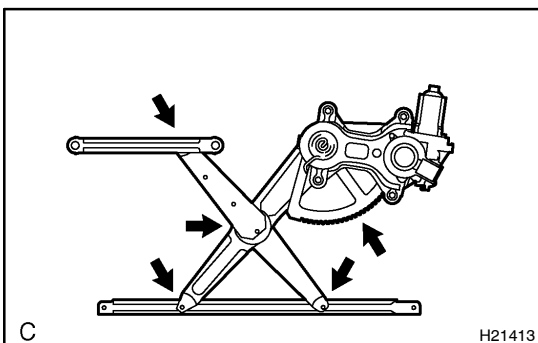


**HINT:**

At the time of reassembly, apply MP grease to the window regulator.

**NOTICE:**

**At the time of reassembly, do not apply grease to the spring of the window regulator.**

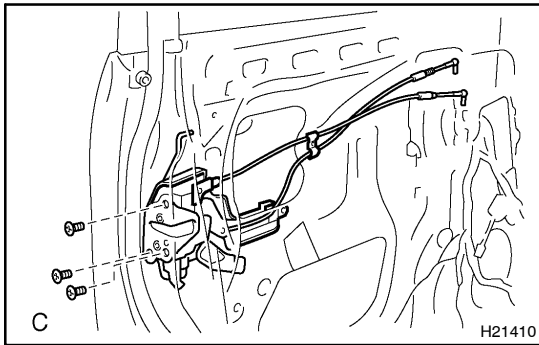**19. REMOVE DOOR LOCK**

- (a) Remove the clip and the door lock link protector.
- (b) Disconnect the connector.
- (c) Disconnect the 2 links from the outside handle and the door lock cylinder.
- (d) Using a torx wrench, remove the 3 screws and the door lock.

**Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)**

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**


**HINT:**

Remove the door lock through the service hole.

**HINT:**

At the time of reassembly:

- Apply adhesive to the 3 screws.  
**Part No. 08833-00070, THREE BOND 1324 or equivalent.**

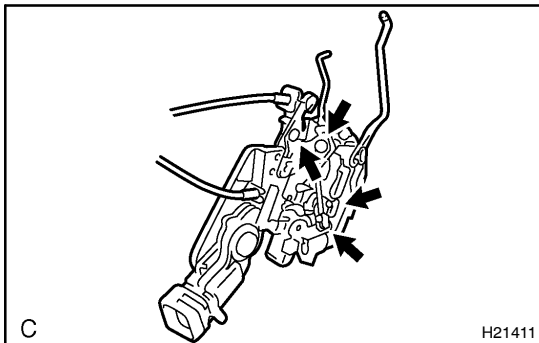

- Remove the protector, and apply MP grease to the sliding and rotating parts of the door lock.

**20. REMOVE OUTSIDE HANDLE WITH DOOR LOCK CYLINDER**

- (a) Remove the 2 bolts and the outside handle with the door lock cylinder.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

- (b) Remove the bolt and the door lock cylinder from the outside handle.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**