


DISASSEMBLY

1. REMOVE HEADREST

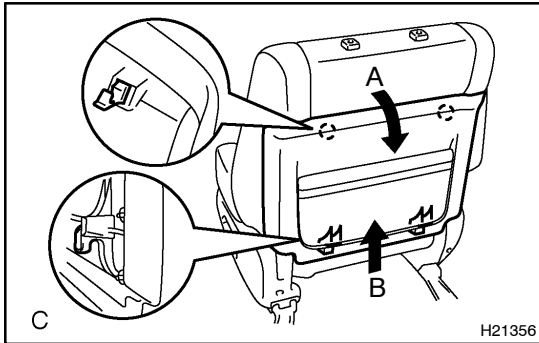

2. REMOVE SEATBACK BOARD

Remove the seatback board as shown in the illustration.

HINT:

Remove the seatback board in the order of "A" and "B" as shown in the illustration.



3. REMOVE SEAT CUSHION OUTER SHIELD

- (a) Using a screwdriver, remove the power seat switch knobs.


HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws.
 (c) Disconnect the connectors as shown in the illustration.
 (d) Remove the seat cushion outer shield.

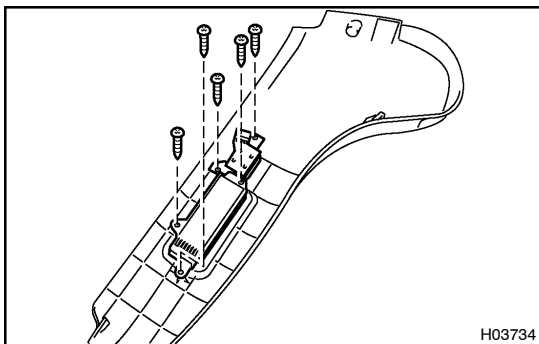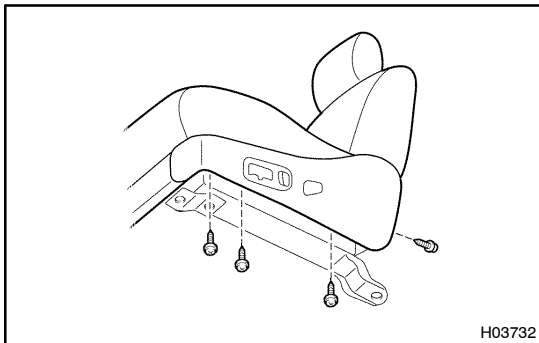


- (e) Remove the 3 screws and the power seat switch from the seat cushion outer shield.
 (f) Remove the 2 screws and the lumbar support switch from the seat cushion outer shield.

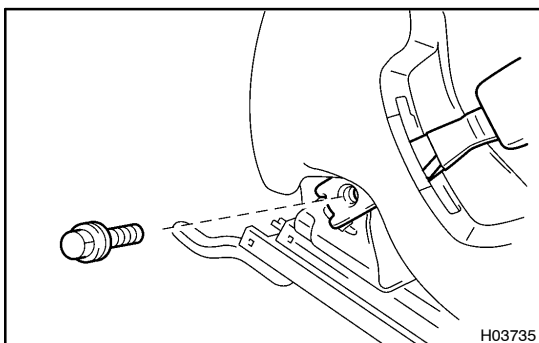


4. REMOVE FRONT SEAT INNER BELT


- (a) Remove the clamp, then disconnect the connector.
 (b) Remove the bolt and the inner belt.

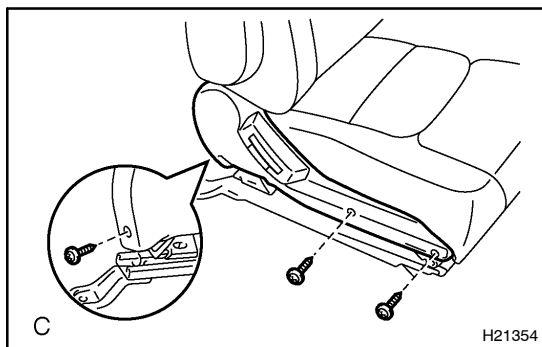**5. REMOVE SEAT CUSHION INNER SHIELD**


Remove the 3 screws and the seat cushion inner shield.

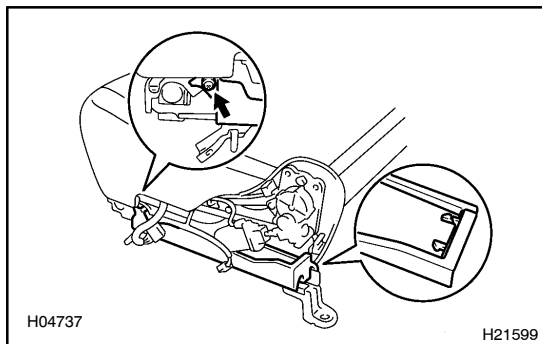**6. REMOVE LOWER SEAT CUSHION SHIELD**

Remove the screw and the lower seat cushion shield as shown in the illustration.

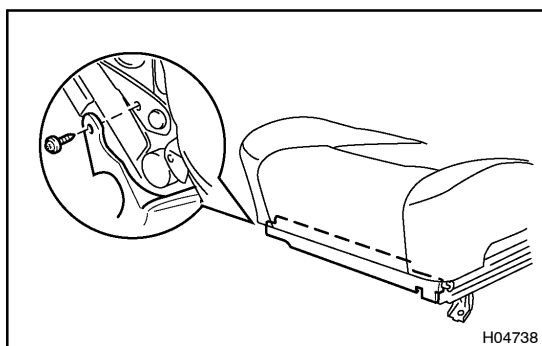**7. REMOVE FRONT SEAT CUSHION SHIELD**

Remove the screw and the front seat cushion shield.

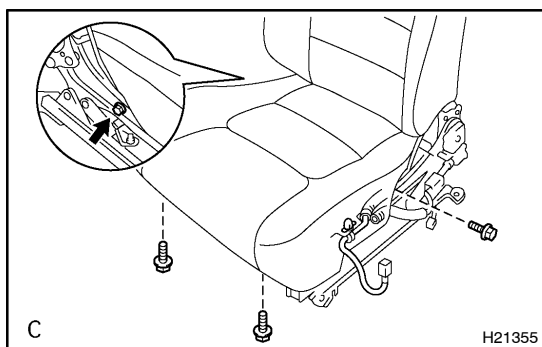**8. REMOVE SEAT CUSHION ASSEMBLY**


- (a) Remove the 4 bolts.
- (b) Remove the clamps from the seat cushion assembly.


9. REMOVE SEAT CUSHION FRAME

- (a) Disengage the hook.
- (b) Remove the hog rings and the seat cushion frame from the seat cushion cover with pad.

10. REMOVE SEAT CUSHION COVER (See page BO-140)**11. IF NECESSARY, REPLACE SEAT CUSHION HEATER (See page BO-140)****12. REMOVE SEATBACK ASSEMBLY**

- (a) Remove the hog rings.
- (b) Disengage the hook as shown in the illustration.
- (c) Disconnect the connectors.

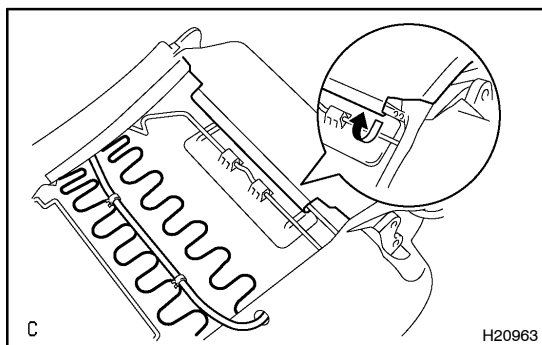

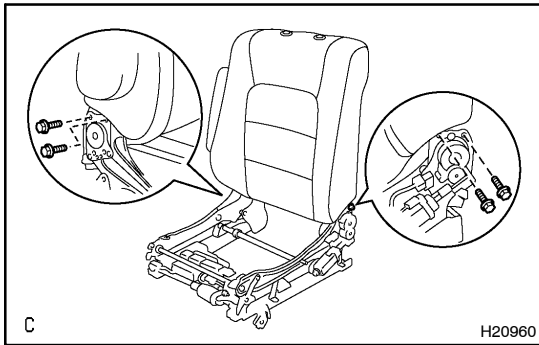

- (d) Remove the 4 bolts and the seatback assembly.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- (e) Remove the screw and the RH reclining adjuster inside shield.
(f) Disconnect the side airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- (g) Remove the screw and the LH reclining adjuster inside shield.

13. REMOVE ARMREST

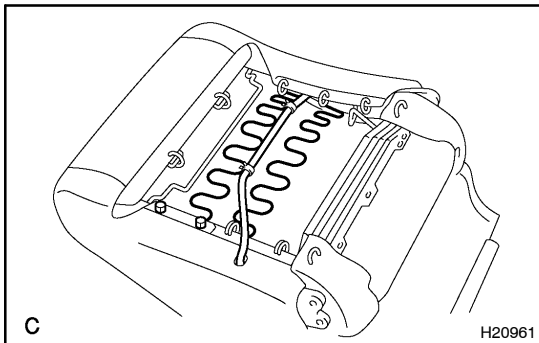

14. REMOVE SEATBACK FRAME

- (a) Remove the hog rings, the clamps and the 2 bolts.
(b) Remove the 2 headrest supports.
(c) Remove the seatback frame from the seatback cover with the pad.

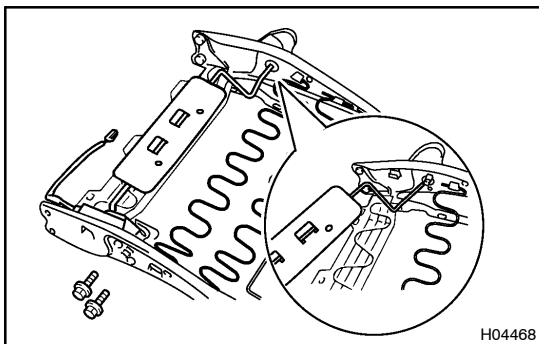


15. REMOVE LUMBER SUPPORT

Remove the 2 bolts, the lumbar support and the spacer.

16. REMOVE POWER SEAT MOTOR ASSEMBLY

Remove the 4 screws and the power seat motor assembly.

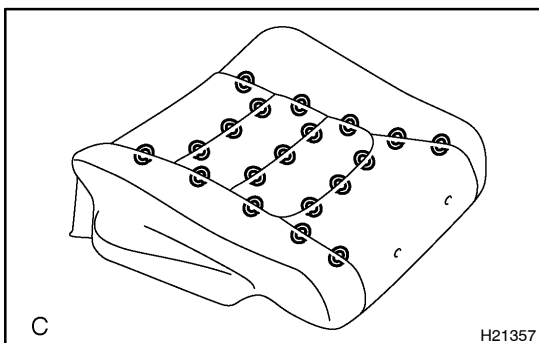

17. REMOVE SEATBACK COVER


Remove the hog rings and the seatback cover from the seat-back pad.

18. IF NECESSARY, REPLACE SEATBACK HEATER

(See page [BO-140](#))

19. REMOVE SEAT POSITION CONTROL RELAY

- (a) Disconnect the connectors.
(b) Remove the 2 bolts and the seat position control relay.

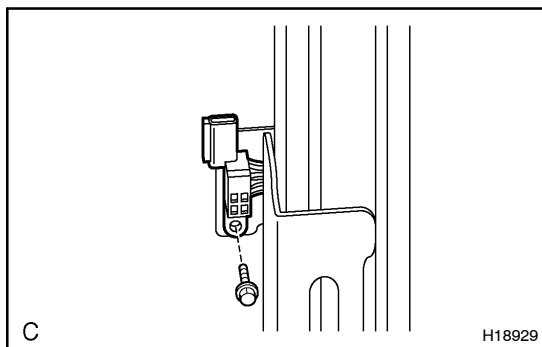**20. Driver's Side:****REMOVE SEAT POSITION SENSOR**

Remove the bolt and the seat position sensor, then disconnect the connector.