



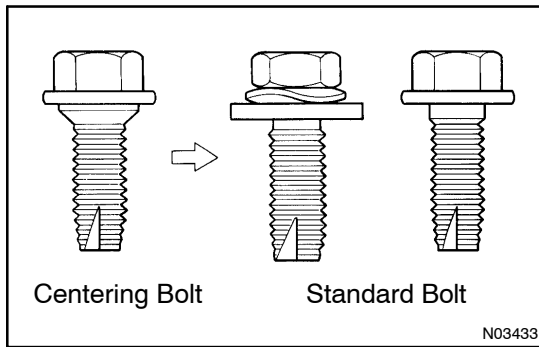

ADJUSTMENT

HINT:


Since the centering bolt is used as the hood hinge and the hood lock set bolt, the hood and the hood lock cannot be adjusted with it on. Substitute the bolt with the washer for the centering bolt.

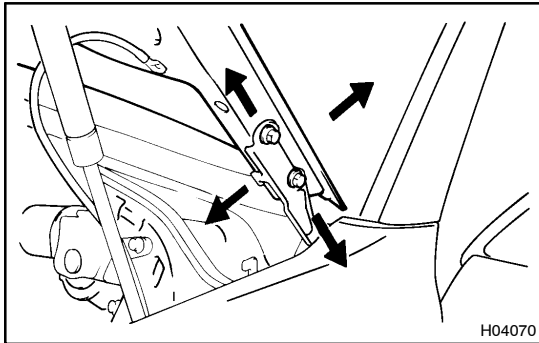

1. ADJUST HOOD IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


Adjust the hood by loosening the hood side hinge bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

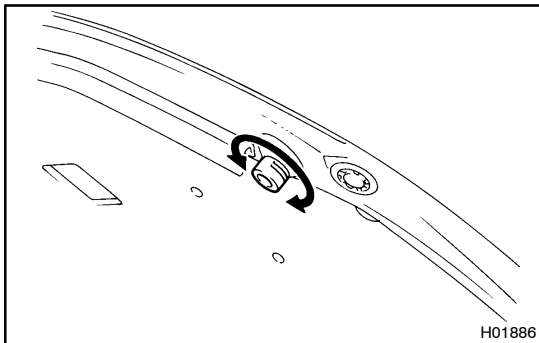

2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

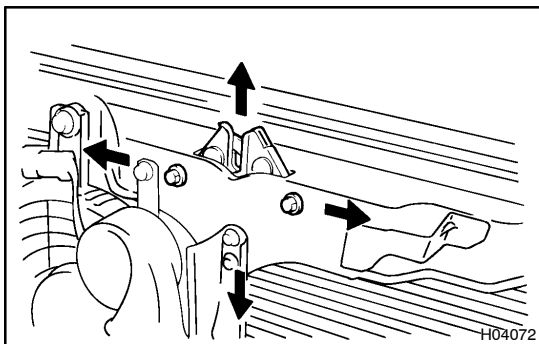

3. ADJUST HOOD LOCK

Adjust the hood lock by loosening the bolts and the nuts.

Torque:

Bolt: 8.0 N·m (82 kgf·cm, 71 in·lbf)

Nut: 8.0 N·m (82 kgf·cm, 71 in·lbf)