


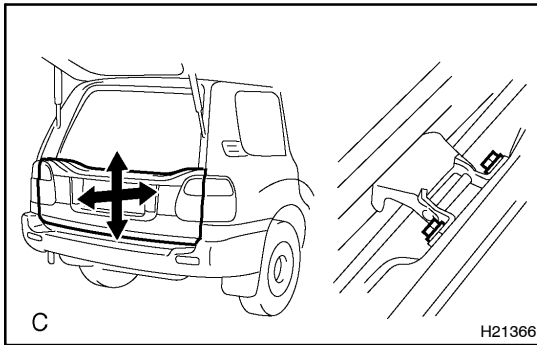


ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust it.


Torque: 28 N·m (286 kgf·cm, 21 ft·lbf)

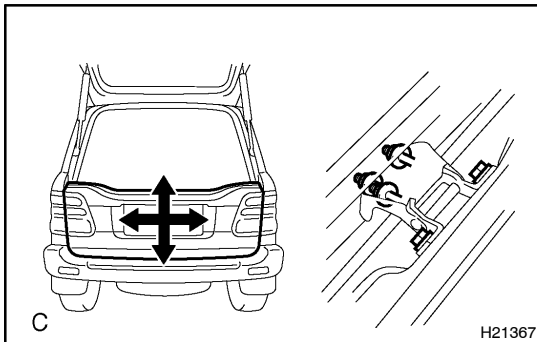

2. ADJUST DOOR IN LEFT / RIGHT AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts and the nuts to adjust it.

Torque: 31 N·m (316 kgf·cm, 23 ft·lbf)

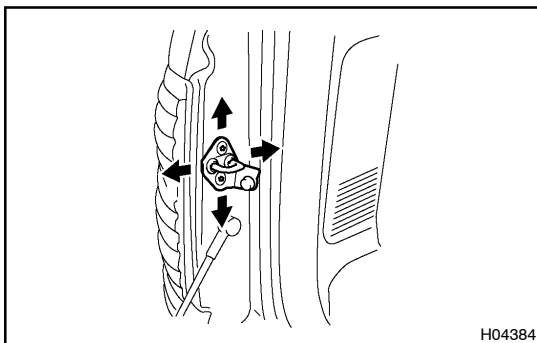

3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fits, and door linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 11.5 N·m (117 kgf·cm, 8 ft·lbf)

(c) Using a plastic hammer, tap the striker to adjust it.