


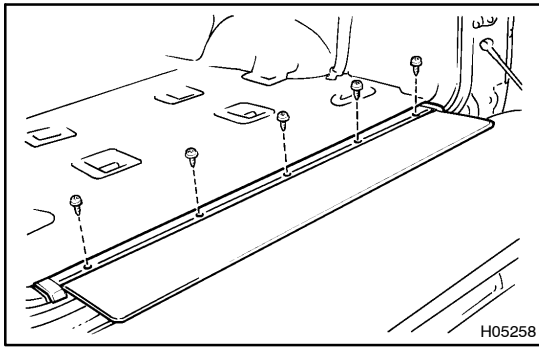


DISASSEMBLY

1. REMOVE REAR MAT SET PLATE

- Remove the 5 screws.
- Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.

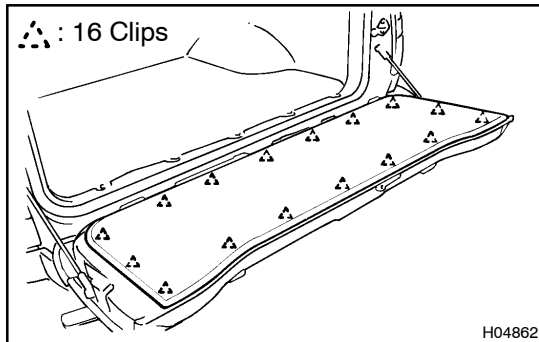


2. REMOVE BACK DOOR TRIM

- Insert a screwdriver between the door and the door trim to pry out.

HINT:


Tape up the screwdriver tip before use.

- Remove the door trim.

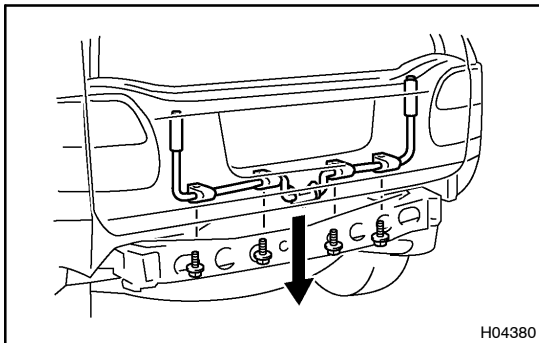


3. REMOVE LOWER TORSION BAR

- Remove the rear bumper. (See page [BO-5](#))
- Remove the 4 bolts and the lower torsion bar as shown in the illustration.
- Remove the torsion bar guide.

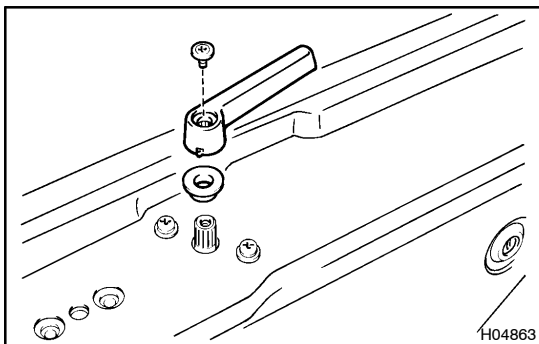

4. REMOVE BACK DOOR INSIDE HANDLE

- Remove the screw and the back door inside handle.
- Remove the spacer.

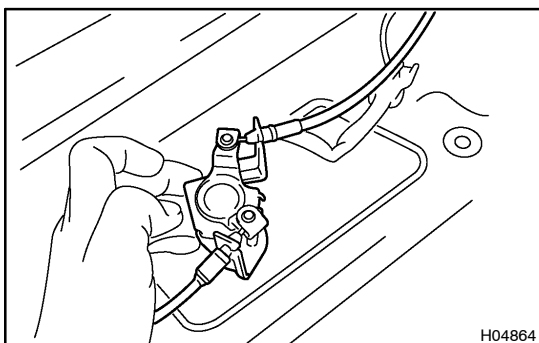


5. REMOVE BACK DOOR LOCK CONTROL

- Remove the 2 screws.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- Disconnect the door lock control cables, then remove the back door control.

6. REMOVE SERVICE HOLE COVER


NOTICE:

Do not tear the service hole cover.

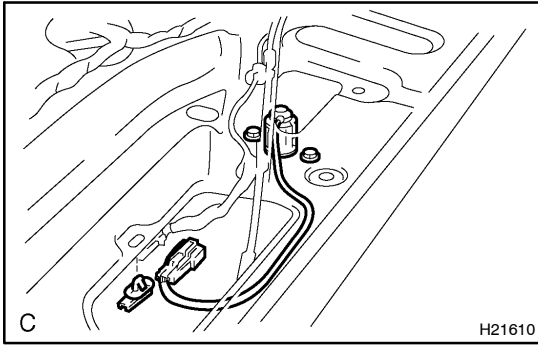**7. REMOVE KEY CYLINDER**

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and the key cylinder.


Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

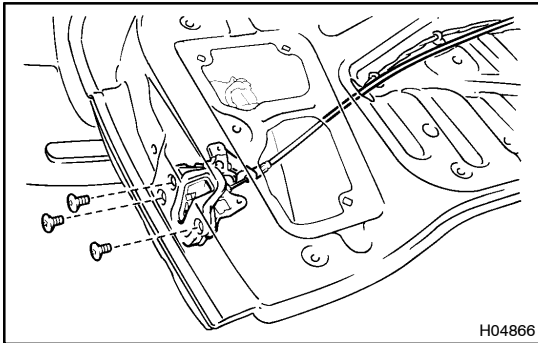**8. REMOVE BACK DOOR LOCK**

- (a) Disconnect the control cables from the clamps.
- (b) Using a torx wrench, remove the 6 screws and the back door locks.


Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

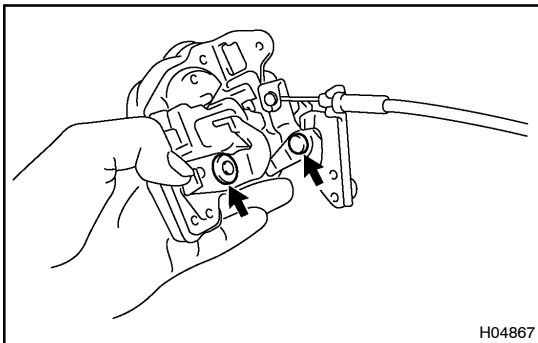**HINT:**

At the time of assembly, please refer to the following item.
Apply MP grease to the rotating parts of the door lock.

- (c) Employ the same manner described above to the other side.

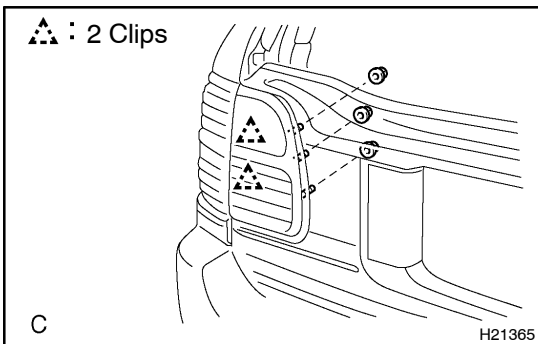
**9. REMOVE REAR LAMP ASSEMBLY**

- (a) Disconnect the connector.
- (b) Remove the 6 nuts.
- (c) Using a screwdriver, remove the rear lamp assemblies.

HINT:

Tape up the screwdriver tip before use.

- (d) Employ the same manner described above to the other side.

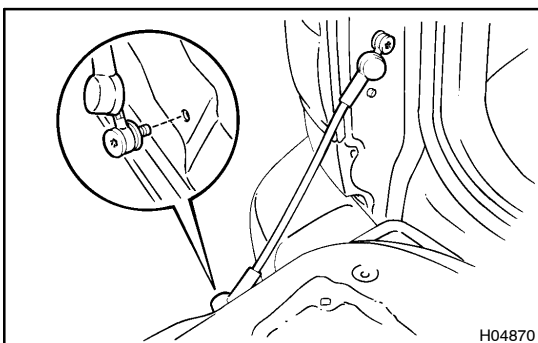**10. REMOVE TAIL GATE STAY**

- (a) Using a torx wrench, remove the 2 screws and the tail gate stay.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (b) Employ the same manner described above to the other side.