


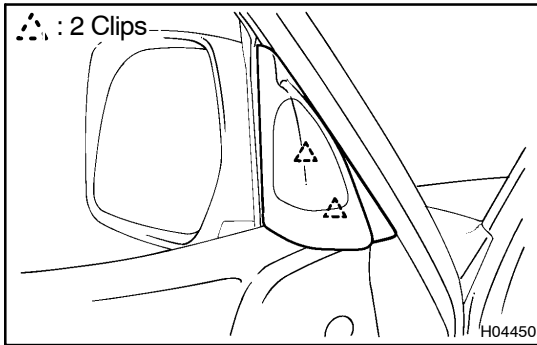


REMOVAL

1. REMOVE LOWER FRAME BRACKET GARNISH

Using a screwdriver, remove the lower frame bracket garnish.

HINT:

Tape up the screwdriver tip before use.

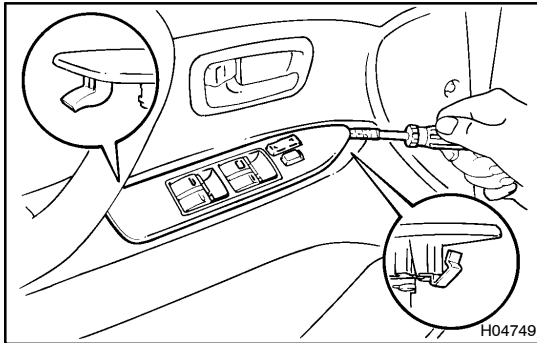


2. REMOVE POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Disconnect the connector.

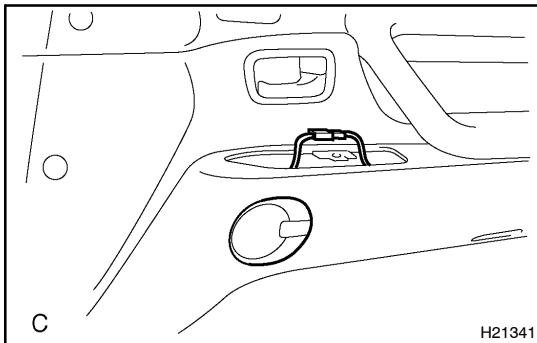


3. w/ Mark Levinson:

REMOVE CENTER SPEAKER

- (a) Disconnect the connector.
- (b) Using a screwdriver, remove the center speaker.

HINT:

Tape up the screwdriver tip before use.

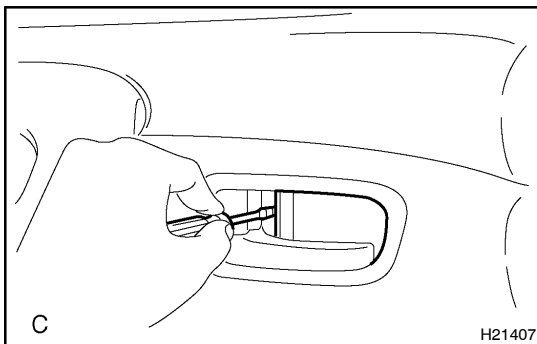


4. REMOVE DOOR INSIDE HANDLE BEZEL No. 2

Using a screwdriver, remove the door inside handle bezel No. 2 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

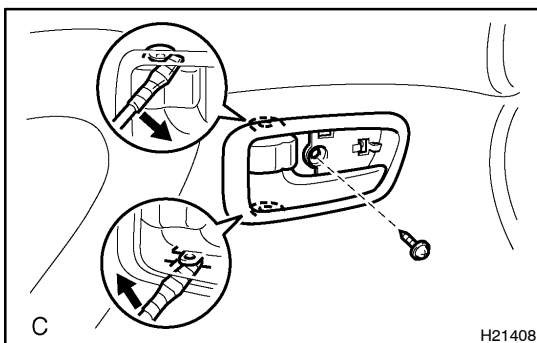


5. REMOVE DOOR INSIDE HANDLE BEZEL No. 1

- (a) Remove the screw.
- (b) Using a screwdriver, remove the door inside handle bezel No. 1 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

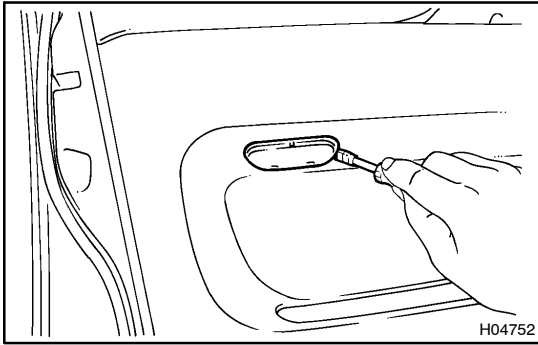**6. REMOVE DOOR COURTESY LIGHT**

Using a screwdriver, remove the door courtesy light then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.


7. REMOVE SEAT MEMORY SWITCH

(a) Using a screwdriver, remove the seat memory switch.

HINT:

Tape up the screwdriver tip before use.

(b) Disconnect the connector.

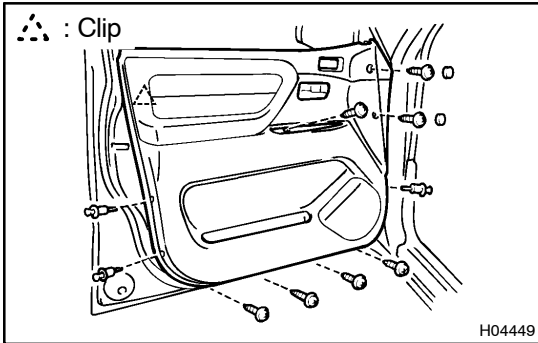**8. REMOVE DOOR TRIM**

(a) Remove the 2 caps and the 7 screws.

(b) Remove the 3 clips.

(c) Insert a screwdriver between the door and the door trim to pry the trim.


NOTICE:

Be careful not to damage the door and door trim.


HINT:

Tape up the screwdriver tip before use.

(d) Pull the trim upward to remove it.

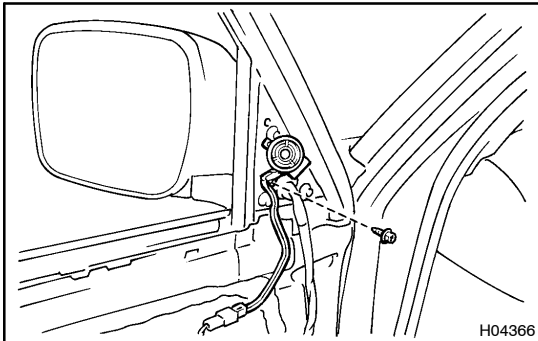**9. REMOVE TWEETER SPEAKER**

Disconnect the connector, then remove the screw and the tweeter speaker.

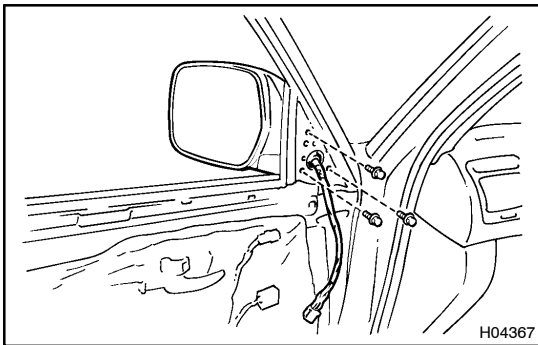**10. REMOVE OUTSIDE REAR VIEW MIRROR**

(a) Disconnect the connector.

(b) Remove the 3 bolts.

(c) Remove the outside rear view mirror.