




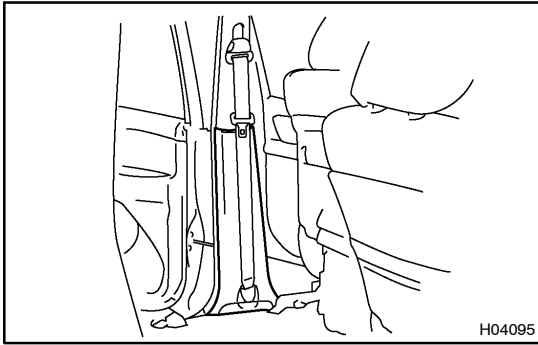

H04095

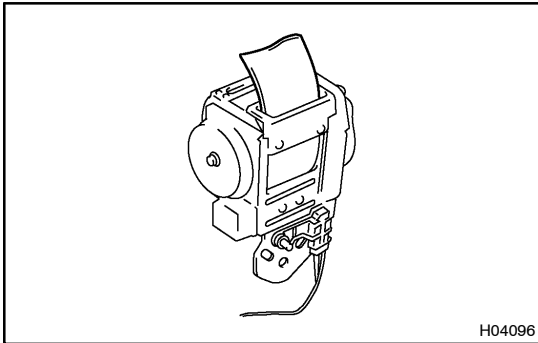

H04096

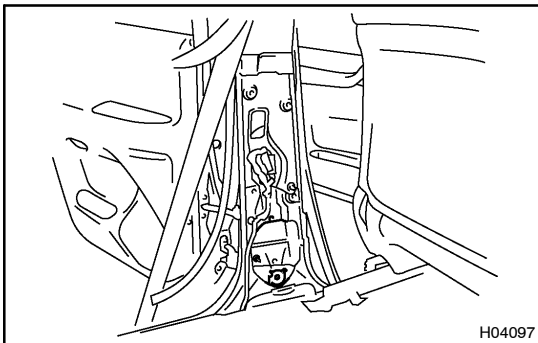

H04097

## INSPECTION

### 1. PRETENSIONER IS NOT ACTIVATED

- (a) Perform a diagnostic system check.  
(See page [DI-876](#))
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
  - Check for cuts and cracks in, or marked discoloration of the center pillar lower garnish.
  - Check for cuts and cracks in wire harness, and for chipping in connectors.
  - Check for deformation of the center pillar.

### CAUTION:

For removal and installation of the front seat outer belt, see page [BO-171](#) and [BO-179](#).

Be sure to follow the correct procedure.

### 2. PRETENSIONER IS ACTIVATED

- (a) Perform a diagnostic system check.  
(See page [DI-876](#))
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
  - Check for deformation of the center pillar.
  - Check for damage on the connector and wire harness.