


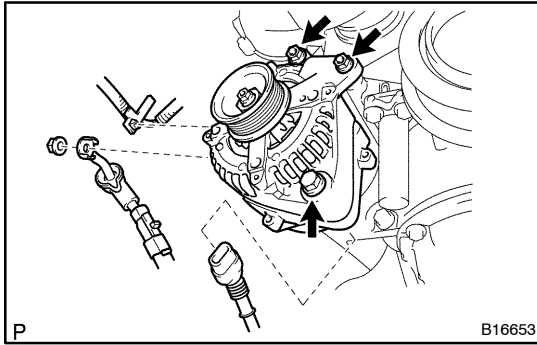

INSTALLATION

1. INSTALL GENERATOR

- (a) Install the generator with the bolt and 2 nuts.

Torque:

Bolt: 39 N·m (400 kgf·cm, 29 ft·lbf)

Nut 10 mm: 39 N·m (400 kgf·cm, 29 ft·lbf)

Nut 8 mm: 15.5 N·m (158 kgf·cm, 11 ft·lbf)


- (b) Connect the generator connector.
 (c) Connect the generator wire with the nut.
Torque: 9.8 N·m (100 kgf·cm, 87 in·lbf)
 (d) Install the terminal cap.
 (e) Install the wire clamp to the cord clip on the generator.

2. INSTALL PS VANE PUMP PULLEY

(See page [SR-35](#))

3. INSTALL RADIATOR ASSEMBLY

(See page [CO-19](#))

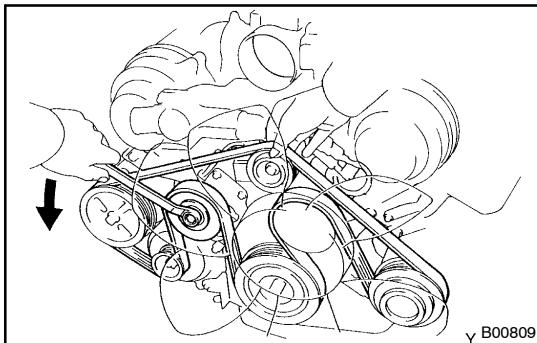

4. INSTALL GENERATOR DRIVE BELT

Install the belt by turning the belt tensioner counterclockwise.

HINT:

The pulley bolt for the belt tensioner has a left – hand thread.

5. FULL ENGINE COOLANT

6. START ENGINE AND CHECK FOR LEAKS

7. RECHECK ENGINE COOLANT LEVEL

8. PERFORM ON-VEHICLE INSPECTION

(See page [CH-2](#))

9. INSTALL ENGINE UNDER COVER NO.1