


DTC	14	Engine Coolant Temperature Sensor Circuit
-----	----	---

CIRCUIT DESCRIPTION

This sensor detects the engine coolant temperature and sends the appropriate signals to the ECM. These signals are used for warm up control when engine is cold.

DTC No.	Detection Item	Trouble Area
14	Open or short in engine coolant temperature sensor circuit	• Engine coolant temp. sensor • Harness or connector between engine coolant temp. sensor and ECM • Harness or connector between ECM and A/C amplifier • ECM • A/C amplifier

WIRING DIAGRAM

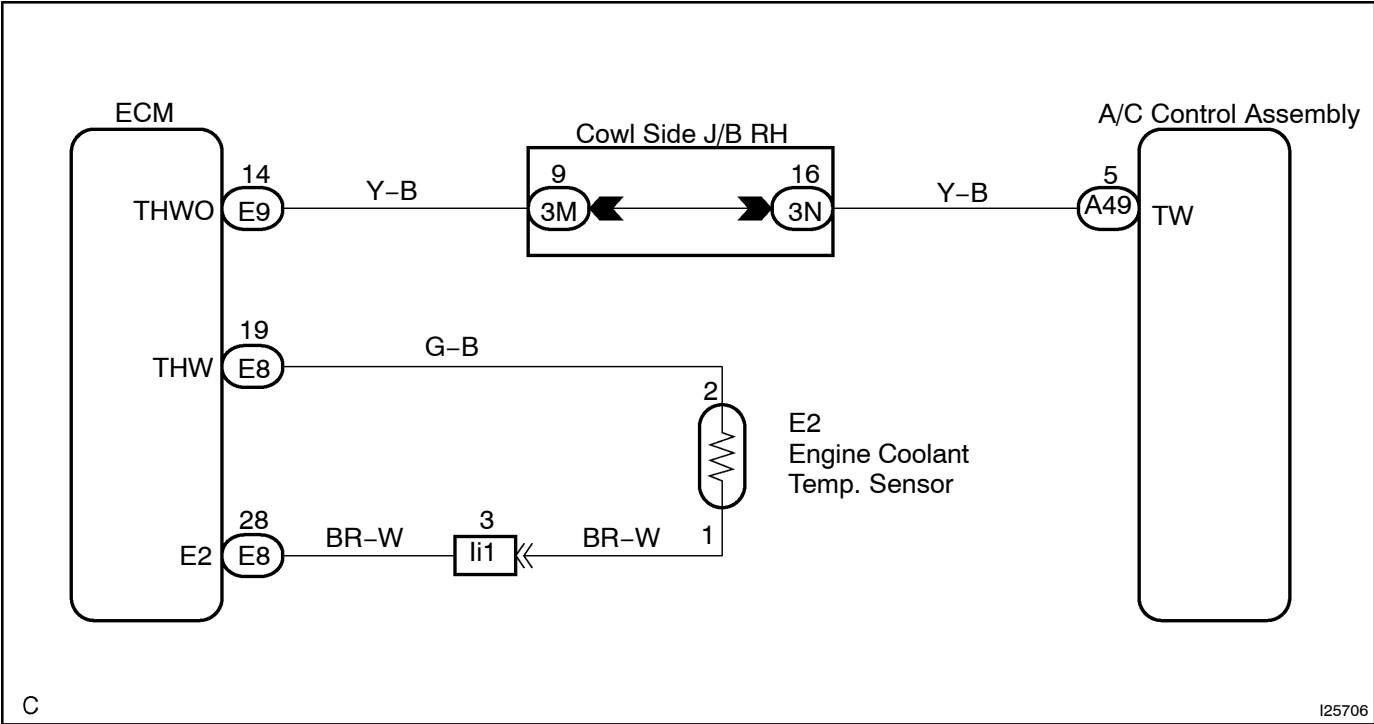

INSPECTION PROCEDURE

1 Does DTC P0115 or P0117 or P0118 output?

YES

Go to engine troubleshooting
(See page [DI-75](#)).

NO

2 Check harness and connector between ECM and A/C amplifier.

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.