


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and E₁ of the DLC1 causes the ECU to display the DTC by flashing the height control OFF indicator light.

WIRING DIAGRAM

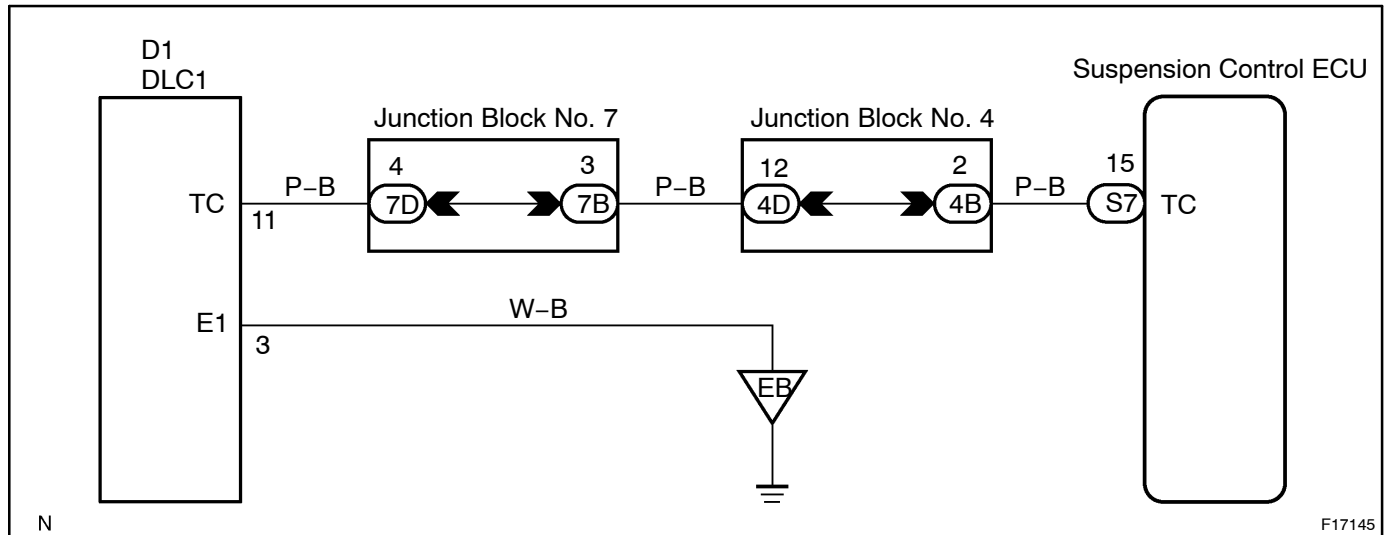

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check voltage between terminals Tc and E₁ of DLC1. |
|----------|--|

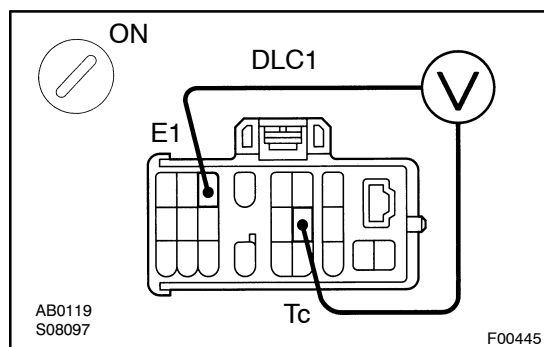**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and E₁ of DLC1.

OK:**Voltage: 9 – 14 V****OK****No problem.****NG**

- | | |
|----------|--|
| 2 | Check for open and short circuit in harness and connector between suspension control ECU and DLC1, DLC1 and body ground (See page IN-36). |
|----------|--|

NG**Repair or replace harness or connector.****OK****Check and replace suspension control ECU.**