


DRL relay circuit

WIRING DIAGRAM

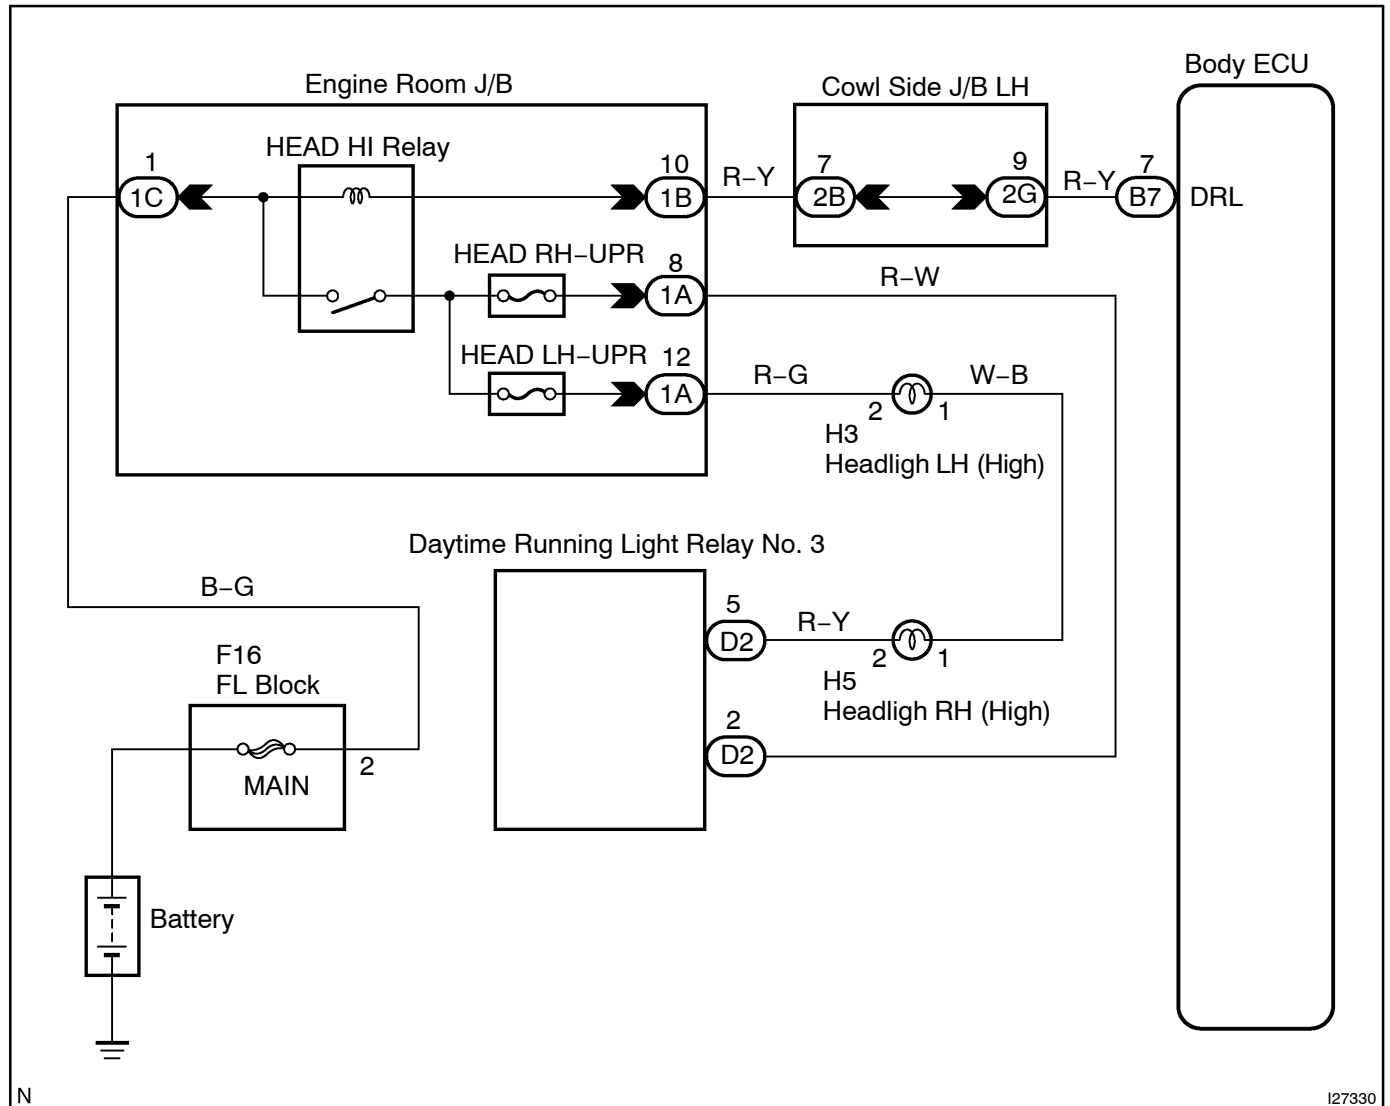

N

I27330

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check DRL relay using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the headlight relay operate in ACTIVE TEST (See page [DI-1396](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1412](#)).

NG

2	Check DRL relay (See page BE-36).
---	--

NG

Replace the DRL relay.

OK

3	Check wire harness and connector between DRL relay and Body ECU (Main) (See page IN-36).
---	---

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1412](#)).