


Rear wiper switch circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the wiper and washer switch and send it to the Body ECU (Sub).

WIRING DIAGRAM

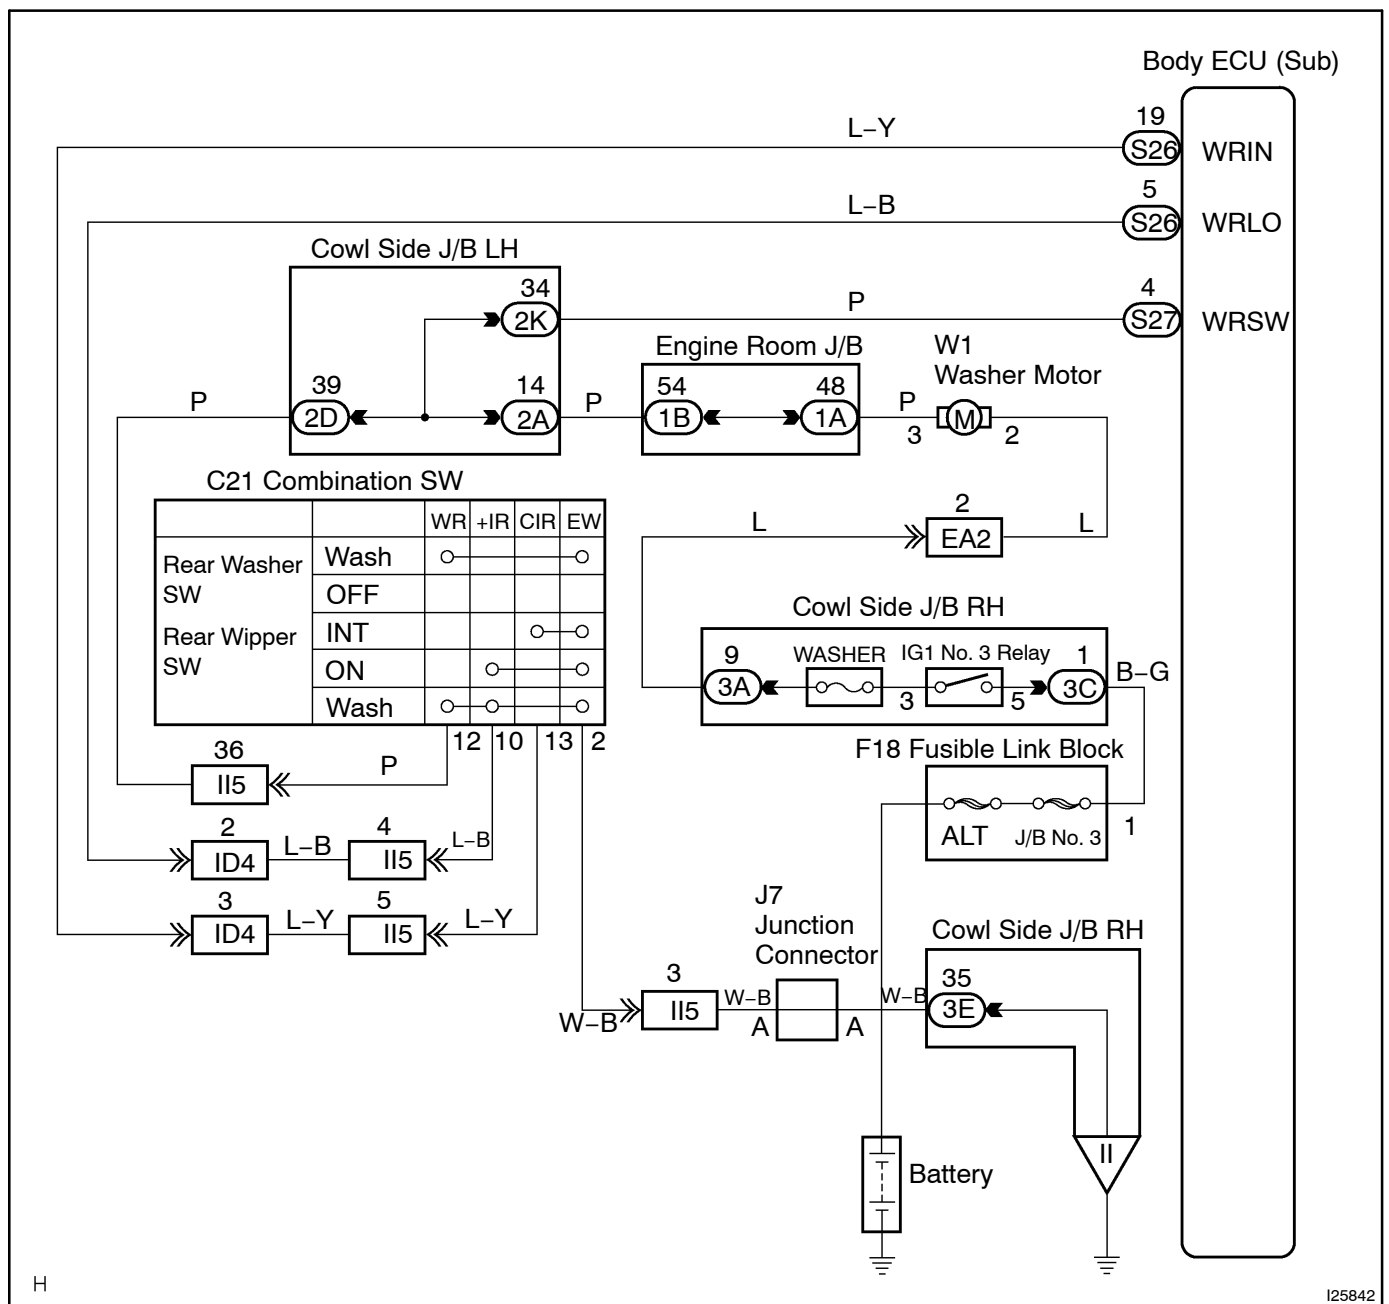

INSPECTION PROCEDURE

1	Check WASHER fuse.
---	--------------------

CHECK:

Check continuity of WASHER fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2	Check rear wiper and washer switch (See page BE-69).
---	---

NG

Replace the rear wiper and washer switch.

OK

3	Check wireharness and connector between rear wiper and washer switch and Body ECU (Sub) (See page IN-36).
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1412](#)).