


# Wireless door lock control circuit

## WIRING DIAGRAM

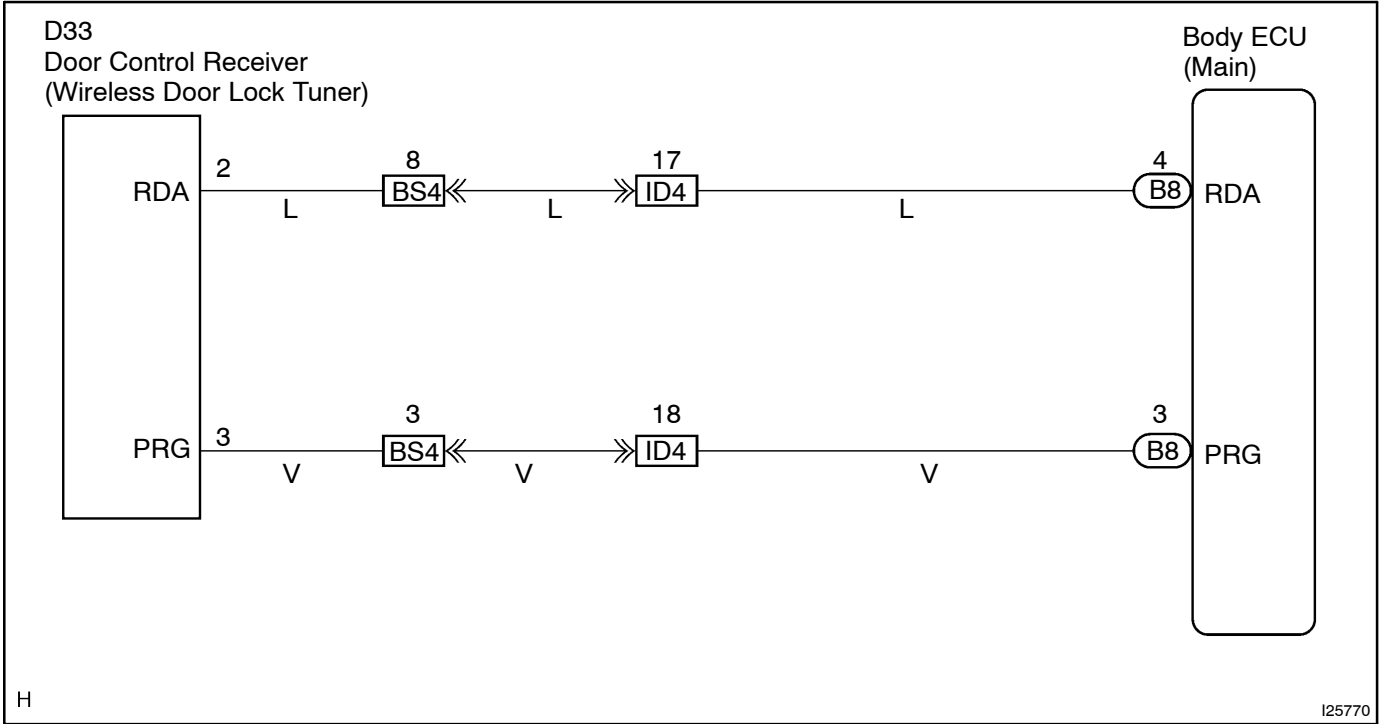

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

|   |                                                  |
|---|--------------------------------------------------|
| 1 | Check wireless door lock using hand-held tester. |
|---|--------------------------------------------------|

### PREPARATION:

Connect the hand-held tester to DLC 3.

### CHECK:

Check that the wireless door lock operate in ACTIVE TEST (See page [DI-1396](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1412](#)).

NG

|   |                                                                                                                        |
|---|------------------------------------------------------------------------------------------------------------------------|
| 2 | Check wire harness and connector between wireless door lock ECU and Body ECU (Main) (See page <a href="#">IN-36</a> ). |
|---|------------------------------------------------------------------------------------------------------------------------|

NG

Repair or replace wire harness or connector.

OK

Go to Wireless Door Lock Control System  
(See page [DI-1145](#)).