

CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light comes on.

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Perform Active Test of hand-held tester. |
|---|--|

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check the cruise indicator of the combination meter using Active Test.

OK:

Description	Tester display	Check condition
CRUISE Indicator light	CRUISE INDIC	ON/OFF

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-1198](#)).

NG

Check and replace combination meter.
(See page [IN-36](#)).