

## PROBLEM SYMPTOMS TABLE

| Symptom                                                                                           | Suspect Area                                                                                                                                    | See page                                         |
|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| SET cannot be done and/or CANCEL cannot be done.<br>(DTC is Normal)                               | 1. Input Signal Circuit<br>2. Vehicle Speed Sensor Circuit<br>3. Stop Light Switch Circuit<br>4. Park/Neutral Position Switch Circuit<br>5. ECM | DI-1204<br>DI-1199<br>DI-1200<br>DI-403<br>IN-36 |
| SET cannot be done and/or CANCEL cannot be done.<br>(DTC is not output)                           | 1. ECM                                                                                                                                          | IN-36                                            |
| Actual vehicle speed deviates above or below the set speed.                                       | 1. Input Signal Circuit<br>2. ECM                                                                                                               | DI-1204<br>IN-36                                 |
| Gear shifting occurs frequently between 3rd and O/D when driving on uphill road. (Hurting)        | 1. ECM                                                                                                                                          | IN-36                                            |
| Cruise control is not cancelled even when brake pedal is depressed.                               | 1. Stop Light Switch Circuit<br>2. ECM                                                                                                          | DI-1200<br>IN-36                                 |
| Cruise control not cancelled, even when transmission is shifted to "N" position.                  | 1. Park/Neutral Position Switch Circuit<br>2. ECM                                                                                               | DI-403<br>IN-36                                  |
| Control switch does not operate.<br>(+/SET, +/-RES, CANCEL not possible)                          | 1. Cruise Control Switch Circuit<br>2. ECM                                                                                                      | DI-1205<br>IN-36                                 |
| SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less. | 1. Input Signal Circuit<br>2. ECM                                                                                                               | DI-1204<br>IN-36                                 |
| Poor response is ACCEL and RESUME modes.                                                          | 1. ECM                                                                                                                                          | IN-36                                            |
| O/D does not resume even though the road is not uphill.                                           | 1. ECM                                                                                                                                          | IN-36                                            |
| DTC memory is erased.                                                                             | 1. ECM                                                                                                                                          | IN-36                                            |
| DTC is not output, or is output when should not be.                                               | 1. Diagnosis Circuit<br>2. ECM                                                                                                                  | –<br>IN-36                                       |
| Cruise MAIN indicator light remains ON or fails to come on.                                       | 1. Input Signal Circuit<br>2. ECM                                                                                                               | DI-1204<br>IN-36                                 |
| Cruise MAIN indicator light does not come on.                                                     | 1. Cruise MAIN indicator Light Circuit<br>2. ECM                                                                                                | DI-1208<br>IN-36                                 |