

CIRCUIT INSPECTION

DTC	B1221	Power window switch circuit on driver door
------------	--------------	---

CIRCUIT DESCRIPTION

These DTC notifies how switch works as follows:

If DTC is not output when operating switch, this means failure of switch contact. If DTC is output when not operating switch, this means stick of switch. When a malfunction is found by this diagnosis, inspect each switch. Then, replace the switch if there is a problem, or check the wire harness if there is no problem.

DTC No.	DTC Detecting Condition	Trouble Area
B1221	Stick of either of the power window master switch (except window lock switch)	• Power window master switch • Wire harness

HINT:

Refer to BE section for switch inspection.