


Door lock motor circuit

WIRING DIAGRAM

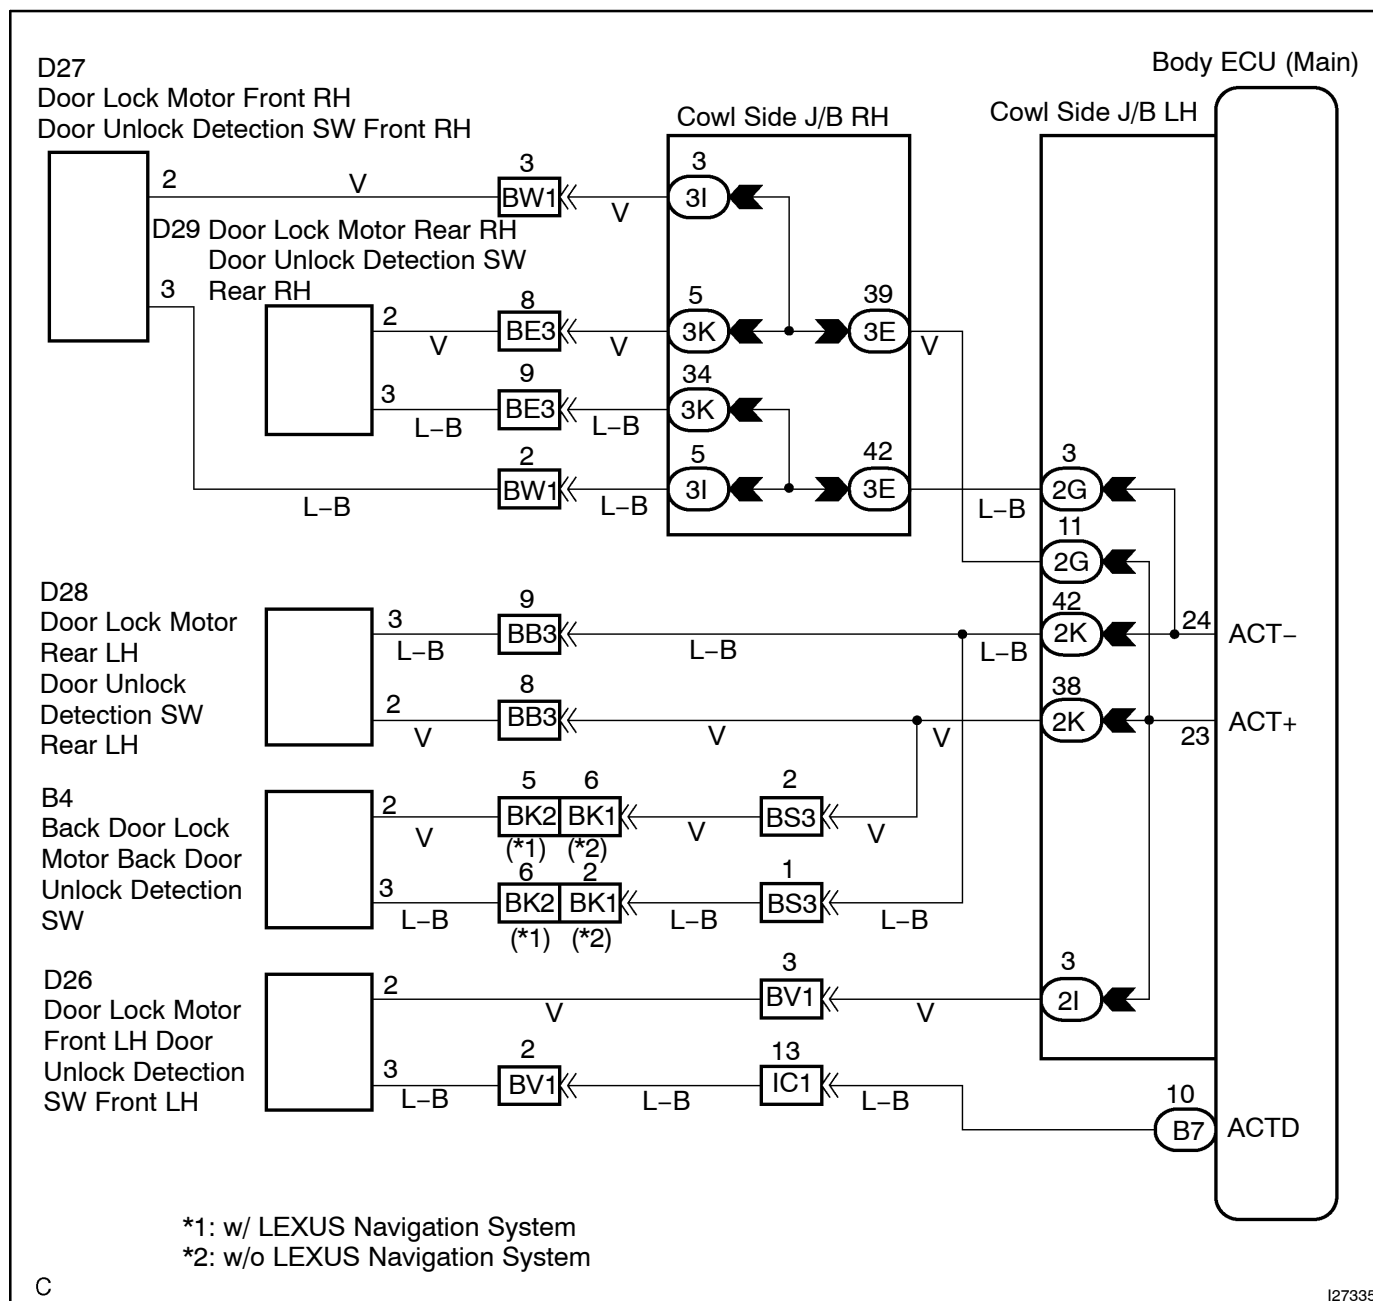

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check door lock motor using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the door lock motor operate in ACTIVE TEST (See page [DI-1475](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1482](#)).

NG

2	Check the door lock motor (See page BE-114).
---	---

NG

Replace the door lock motor.

OK

3	Check wire harness and connector between door lock motor and Body ECU (Main) (See page IN-36).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1482](#)).