

PROBLEM SYMPTOMS TABLE

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
All the doors cannot be locked or unlocked.	1. Power source circuit 2. Theft deterrent ECU 3. Power window master switch	DI-1490 IN-36 IN-36
Driver side door lock does not operate.	1. Door lock motor circuit 2. Power window master switch 3. Theft deterrent ECU	DI-1494 IN-36 IN-36
Door key related function cannot be done.	1. Door lock switch circuit 2. Door courtesy light and courtesy switch circuit 3. Theft deterrent ECU 4. Power window master switch	DI-1492 DI-1425 IN-36 IN-36
Key confinement prevention function does not operate.	1. Door courtesy light and courtesy switch circuit 2. Door unlock detection switch circuit 3. Theft deterrent ECU 4. Power window master switch	DI-1425 DI-1496 IN-36 IN-36

POWER WINDOW CONTROL SYSTEM:

Symptom	Suspect Area	See page
All the power window does not operate.	1. Power source circuit 2. Power window switch circuit 3. Power window master switch	DI-1490 DI-1483 IN-36
Driver side power window does not operate.	1. Power window motor circuit 2. Power window master switch	DI-1499 IN-36
Jam protection function and auto up or down function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Power window master switch 4. Theft deterrent ECU	DI-1485 DI-1488 IN-36 IN-36
Window lock function does not operate.	1. Power window switch circuit 2. Power window master switch	DI-1483 IN-36
Remote control of all windows (Except driver side) does not operate with master switch. (Window operates normally with each of master switch.)	1. Power window switch circuit 2. Power window master switch	DI-1483 IN-36
The key related power window operations cannot be done with driver door key cylinder. (Master switch operation is normal.)	1. Door key lock and unlock switch circuit 2. Inspect door lock control system 3. Power window switch circuit 4. Power window master switch	DI-1492 BE-114 DI-1483 IN-36
Power window does not operate with keyless entry transmitter. (Windows operate normally with master switch.)	1. Inspect wireless door lock control system 2. Replace Power window master switch 3. Theft deterrent ECU	DI-1145 IN-36 IN-36
Window moves down without being ordered during the up operation.	1. Jam protection limit switch circuit 2. Power window motor circuit 3. Is the window regulator installed correctly? 4. Power window master switch	DI-1485 DI-1501, DI-1505, DI-1509 – IN-36