

ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI3H8-08

Troubleshoot in accordance with the procedure on the following page.

