

The guidance voice of "System Message" does not come out when ignition switch is turned on

The guidance voice of "System Message" intermittently stops when ignition switch is turned on

The guidance voice of "System Message" begins in the middle when ignition switch is turned on

INSPECTION PROCEDURE

1 Confirm problem symptoms.

CHECK:

Confirm problem symptoms.

RESULT:

A: The guidance voice of "System Message" does not come out.

B: The guidance voice of "System Message" intermittently stops or begins in the middle.

B

Check and replace telephone ECU (Mayday ECU) (See page [IN-36](#)).

A

2 Check rear speaker (LH).

CHECK:

Check that sound is heard from rear speaker (LH) when radio switch is ON.

OK:

Radio sound is heard from rear speaker (LH).

NG

Go to "AUDIO SYSTEM" (See page [BE-160](#).)

OK

Check and replace telephone ECU (Mayday ECU) (See page [IN-36](#)).