


The guidance voice of "Demo Memo" does not come out.

INSPECTION PROCEDURE

1	Check Mayday switch (Overhead J/B).
---	-------------------------------------

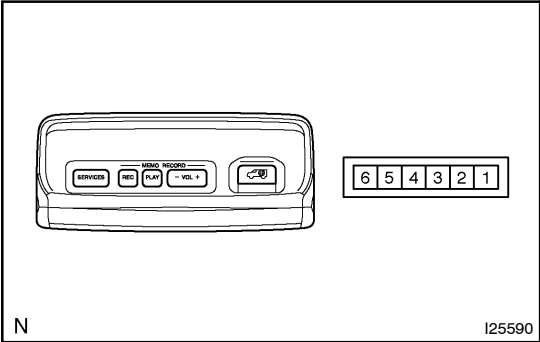

PREPARATION:

Disconnect the Mayday switch connector.

CHECK:

Check that the continuity exists between terminals of Mayday switch when each switch is pressed.

OK:

Switch position	Tester connection	Specified condition
Service Play back Record	1 – 2	Continuity
Emergency Volume UP Volume DOWN	2 – 3	Continuity

NG

Replace the Mayday switch (overhead J/B).

OK

2	Check for open and short circuit in harness and connector between telephone ECU (Mayday ECU) and Mayday switch (Overhead J/B) (See page IN-36).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace telephone ECU (Mayday ECU) (See page [IN-36](#)).