


The connection to LEXUS Link Center cannot be cut off.

INSPECTION PROCEDURE

1

Check Mayday switch (Overhead J/B).

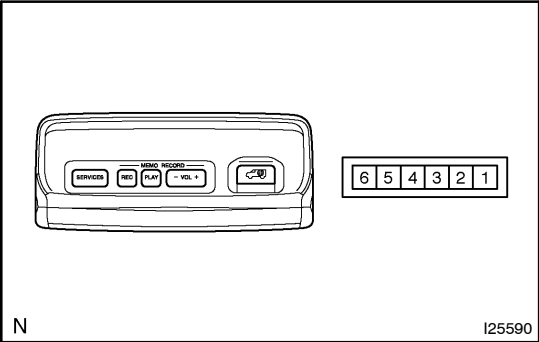

PREPARATION:
Disconnect the Mayday switch connector.

CHECK:
Check that the continuity exists between terminals of Mayday switch when each switch is pressed.

OK:

Switch position	Tester connection	Specified condition
Service Play back Record	1 – 2	Continuity
Emergency Volume UP Volume DOWN	2 – 3	Continuity

NG

Replace the Mayday switch (overhead J/B).

OK

2

Check for open and short circuit in harness and connector between telephone ECU (Mayday ECU) and Msyday switch (over head J/B) (See page [IN-36](#)).

NG

Repair or replace harness or connector.

OK

Check and replace telephone ECU (Mayday ECU) (See page [IN-36](#)).