

CIRCUIT INSPECTION

1. Black screen (Nothing displayed)

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check the ECU-B1, ECU-IG1 and ACC fuse. |
|---|---|

NG

Replace the fuse.

OK

- | | |
|---|---|
| 2 | Check multi-display power source circuit (see page DI-1652). |
|---|---|

NG

Replace or repair wire harness or connector.

OK

Replace the multi-display.