

24. Driving direction is opposite to moving direction of vehicle position mark.

INSPECTION PROCEDURE

1

Navigation check mode (vehicle signal check mode REV).

OK

Replace the navigation ECU.

NG

2

Check the reverse signal circuit of navigation ECU (see page [DI-1658](#)).

OK

Replace the navigation ECU.

NG

Replace or repair wire harness.