

PROBLEM SYMPTOMS TABLE

Flow chart No. (See page)	Component	Symptom
1. (DI-1597)	Multi display	Black screen (Nothing displayed)
2. (DI-1598)		No sound with Power switch pressed. ("AUTO OFF" on audio screen)
3. (DI-1601)		No navigation screen displayed when "MAP", "MENU" or "DEST" switch pressed. (Screen cannot be switched.)
4. (DI-1602)		No corresponding screen displayed when "AUDIO" or "Information" switch pressed.
5. (DI-1603)		No navigation displayed, "Audio OFF" on audio screen and no audio sound.
6. (DI-1605)		Screen cannot be dimmed in night time.
7. (DI-1606)		Navigation screen is not stabilized. (Synchronous error)
8. (DI-1607)		Color on navigation screen is unusual (RGB signal error)
9. (DI-1609)		Black screen appears when "MAP", "Menu" or "DEST" switch pressed.
10. (DI-1610)		Sound of radio, cassette tape or CD only cannot be heard from speaker.
11. (DI-1611)		No sound (radio, cassette tape, CD) can be heard from driver side door speaker only.
12. (DI-1614)		Map DISC cannot be inserted.
13. (DI-1615)		MAP screen display does not appear. (Disc Caution screen does not change.)
14. (DI-1616)		MAP is displayed in white or blue screen. (Switch and vehicle position mark is displayed.)
15. (DI-1617)		Touch switch does not function. (Navigation screen only)
16. (DI-1618)		Touch switch does not function. (A/C control screen only)
17. (DI-1619)		Panel switch does not function. (Navigation screen only)
18. (DI-1620)		Panel switch does not function. (A/C control screen only)
19. (DI-1621)		The screen cannot be changed to night mode color.
20. (DI-1623)		Vehicle position is badly deviated from correct point.
21. (DI-1626)		GPS mark does not appear.

22. (DI-1628)		No voice navigation.
23. (DI-1629)		Vehicle position rotates without control. (Map rotates without control)
24. (DI-1631)		Driving direction is opposite to moving direction of vehicle position mark.
25. (DI-1632)		Navigation system cannot be operated with voice recognition.
26. (DI-1633)	DVD AUTO Changer	Any speaker does not work. (DVD sound only)
27. (DI-1634)		DVD magazine cannot be inserted.
28. (DI-1635)		DVD magazine inserted, but no power.
29. (DI-1636)		Power comes in, but DVD auto changer does not operate.
30. (DI-1638)		Sound jumps. (DVD sound)
31. (DI-1639)		DVD magazine will not be ejected.
32. (BE-160)		Any speaker does not work.