

PROBLEM SYMPTOMS TABLE

HINT:

- The table below shows the problem symptoms which could occur to the Night View System.
- The symptom can be checked using INSPECTION MODE (See page [DI-1247](#)).

Flow cart No.	Symptom	See page
1	Display cover does not open (night view indicator does not come on)	DI-1258
2	Display cover does not open (night view indicator comes on)	DI-1271
3	Display cover does not open (night view indicator comes on for a moment but immediately goes off)	DI-1275
4	Display cover opens but immediately closes	DI-1285
5	Display cover opens but stops while opening	DI-1288
6	Screen is white	DI-1292
7	Screen is black	DI-1303
8	Screen is striped	DI-1314
9	Screen is streaky	DI-1314
10	Screen is dark	DI-1324
11	Blurred bright image is displayed	DI-1324
12	Double image is displayed	DI-1324
13	Defect or flaw on the screen is displayed	DI-1332
14	Night view projector does not come on	DI-1333
15	Night view projector does not go off	DI-1341
16	Night view display does not go off	DI-1344
17	Screen displays colored blur marks	DI-1347
–	Screen is slanted	BE-97