

DTC	B1275	Accessory Bus Buffer communication stop
------------	--------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the Bus buffer ECU and the Body ECU (Main).

DTC No.	DTC Detecting Condition	Trouble Area
B1275	No signal from bus buffer ECU for more than 10 seconds.	• Bus buffer ECU • Wire harness

WIRING DIAGRAM

See page [DI-1532](#).

1	Check wire harness. (See page IN-36)
---	---

Pull out the ECU connectors below.

CHECK:

Check the continuity between the connectors on the wire harness.



Continuity

