

DTC	B1281	Airbag ECU communication stop
------------	--------------	--------------------------------------

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the Airbag sensor assembly and the Body ECU (Main).

DTC No.	DTC Detecting Condition	Trouble Area
B1281	No signal from airbag sensor assembly for more than 10 seconds.	• Center airbag sensor assembly • Wire harness

WIRING DIAGRAM

See page [DI-1532](#).

INSPECTION PROCEDURE

1	Check airbag sensor assembly.
----------	--------------------------------------

CHECK:

Check whether or not DTC is output after replacing the airbag sensor assembly.

OK:

DTC is not output.

OK

**Replace airbag sensor assembly (Original airbag sensor assembly is faulty.)
(See page [IN-36](#)).**

NG

2	Check wire harness. (See page IN-36)
---	---


PREPARATION:

Pull out the ECU connectors below.

Wire harness side connector of ECU	Terminal
Center airbag sensor assembly – Body ECU (Main)	MPX2 (C32-22) – MPX2 (B7-23)

CHECK:

Check continuity of the wire harness between the connectors.

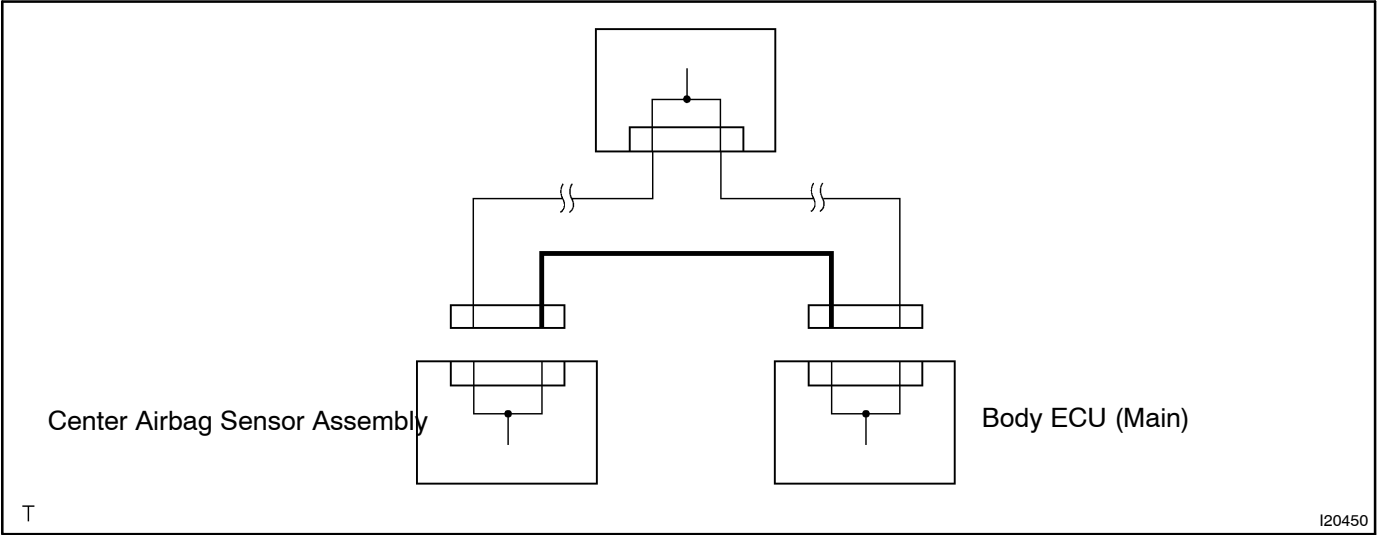

OK:

There is a continuity between the connectors.

HINT:

If there is OPEN in any wire harness, please repair it.

NG

Repair or replace wire harness or connector.

OK

Replace airbag sensor assembly
(See page [IN-36](#)).