


## TERMINALS OF ECU

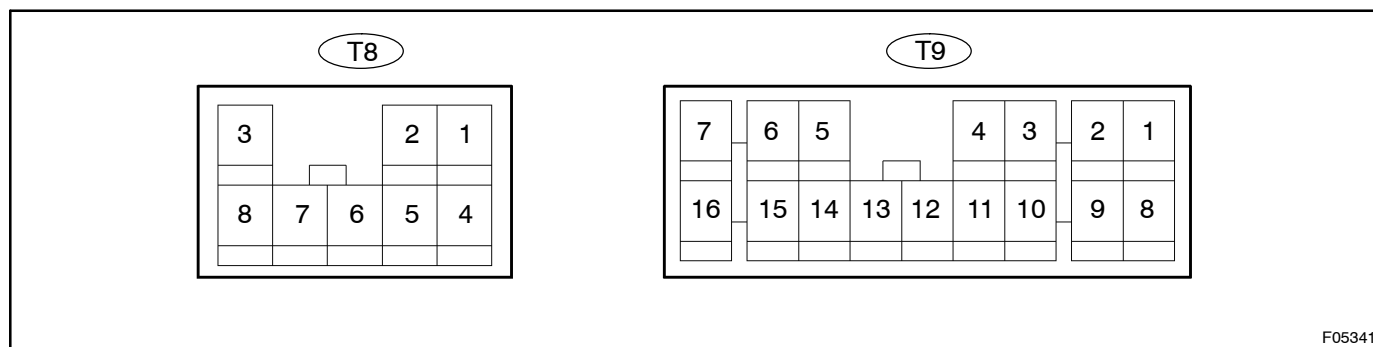

F05341

| Symbols (Terminals No.)                    | Wiring Color         | Condition                                                      | STD Voltage (V)  |
|--------------------------------------------|----------------------|----------------------------------------------------------------|------------------|
| IG – GND (T8-4 – T8-6)                     | B-W – W-B            | IG switch ON                                                   | 10 – 14 (DC)     |
|                                            |                      | IG switch LOCK                                                 | Below 1 (DC)     |
| VC – GND (T8-2 – T8-6)                     | V – W-B              | Always                                                         | 4.5 – 5.5 (DC)   |
| GND – Body Ground<br>(T8-6 – Body Ground)  | W-B –<br>Body Ground | Always                                                         | Below 1 (DC)     |
| ECUB – Body Ground<br>(T8-1 – Body Ground) | L-W –<br>Body Ground | Always                                                         | 10 – 14 (DC)     |
| ECUB – GND (T8-1 – T8-6)                   | L-W – W-B            | Always                                                         | 10 – 14 (DC)     |
| MSW – GND (T8-5 – T8-6)                    | V-Y – W-B            | Tilt up by manual switch                                       | 1.30 – 1.70 (DC) |
|                                            |                      | Tilt down by manual switch                                     | 0.30 – 0.50 (DC) |
|                                            |                      | Telescopic extended by manual switch                           | 2.05 – 2.75 (DC) |
|                                            |                      | Telescopic contracted by manual switch                         | 0.65 – 0.95 (DC) |
|                                            |                      | Manual switch is not operating                                 | Below 0.20 (DC)  |
| +B – GND (T9-4 – T8-6)                     | G-B – W-B            | Always                                                         | 10 – 14 (DC)     |
| S5V1 – SG1 (T9-13 – T9-14)                 | G-W – G-Y            | IG switch ON                                                   | 4.5 – 5.5 (DC)   |
| S5V2 – SG2 (T9-12 – T9-10)                 | B-W – B-Y            | IG switch ON                                                   | 4.5 – 5.5 (DC)   |
| A1 – COM1 (T9-7 – T9-15)                   | P – G                | IG switch ON, tilt up or down by manual switch                 | 190 – 230 (AC)   |
| B1 – COM1 (T9-16 – T9-15)                  | V – G                | IG switch ON, tilt up or down by manual switch                 | 190 – 230 (AC)   |
| A2 – COM2 (T9-1 – T9-9)                    | W – B                | IG switch ON, telescopic extend or contracted by manual switch | 190 – 230 (AC)   |
| B2 – COM2 (T9-8 – T9-9)                    | G – B                | IG switch ON, telescopic extend or contracted by manual switch | 190 – 230 (AC)   |