

## Abnormal noise and vibration in the steering wheel

### INSPECTION PROCEDURE

Check that the DTCs of VGRS, VSC and ABS are normal.

|   |                                                                         |
|---|-------------------------------------------------------------------------|
| 1 | Check for abnormal noise and vibration when turning the steering wheel. |
|---|-------------------------------------------------------------------------|

#### PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the VGRS actuator connector from VGRS ECU.

#### CHECK:

Check for abnormal noise and vibration, after starting the engine and turning the steering wheel.

#### OK:

No abnormal noise and vibration

#### NOTICE:

When the ignition switch is ON with the steering actuator connector disconnected, DTC C1561/61 is stored. Clear this code after this check.

NG

Check and repair power steering system.

OK

Replace VGRS actuator.